

Guide 12

Reference Level Software User's Guide

Issued: May, 2019



Version: 2.0

Effective Date: 05/13/2019

Prepared By: Market Mitigation and Analysis

New York Independent System Operator 10 Krey Boulevard Rensselaer, NY 12144 (518) 356-6060 www.nyiso.com

Disclaimer: The information contained within this guide, along with other NYISO manuals and guides, is intended to be used for information purposes only, and is subject to change. The NYISO is not responsible for the user's reliance on these publications, or for any erroneous or misleading material.

©Copyright 1999-2019 New York Independent System Operator



Table of Contents

TΑ	BLE OF FIGURES		V
RE	VISION HISTORY		VIII
1.	INTRODUCTION		1
	1.1.Definition	n of a Reference Level	1
	1.1.Descripti	ion of the Reference Level Software Application	2
	1.2.Reference	ce Level Software Application Users	2
	1.3.0btainin	g Help and Handling Error Messages	2
2.	SYSTEM REQUIREM	ENTS	3
	2.1.Compute	er Hardware and Software	3
	2.2.Digital Co	ertificates and Market Information System Privileges	3
	2.3.Accessin	g and Exiting the Reference Level Software (RLS) Application	3
	2.4.Accessin	g and Exiting the Reference Level Software (RLS) Application	3
	2.5.1.	Menus	
	2.5.2.	Breadcrumbs	
	2.5.3.	Pages	
	2.5.4.	Links	
	2.5.5.	Filters	
	2.5.6. 2.5.7.	Sorting Controls Page Navigation Controls	
3.		SSION	
э.		g of Engine Types	
	-	a Submission Components	
	3.3.Cost Dat	a Submission Entry Process	17
	3.3.1.	Create a Cost Data Submission	18
	3.3.2.	How to Copy a Submission	50
	3.3.3.	How to Remove a Submission	
	3.3.4.	How to Rescind a Submission	
	3.3.5.	How to View a Submission Summary	
	3.3.6.	How to Submit a Submission for Approval	
	3.3.7.	How to Compare a Submission	
	3.3.8.	How to Add an Attachments to a Submission	
	3.3.9.	How to Add or View Comments for a Submission	
4.		AD COST DATA IN XML FORMAT	
	4.1.Upload C	Cost Data	71



	4.1.	.1. Acceptable File Formats	71
	4.1.		
	4.1.	e constant great data data con contra con contra con contra contr	
	4.1.	.4. How to Upload a Cost Data Submission	71
	4.2.Downl	load Cost Data	74
	4.2.	.1. How to Download a Submission	74
5.	LIST SUBMISSION	NS	76
	How to Lis	st Submissions	76
6.	VIEW APPROVED	O COST DATA	78
	6.1.How to	o View Approved Cost Data	78
7.		E LEVELS	
	7.1.How to	o View Reference Levels	80
8.	NOTIFICATIONS		83
	8.1.How to	o View Notifications	83
9.	PENDING SUBMI	ISSIONS	87
	9.1.How to	o View Pending Submissions	87
10.	COST DATA APPE	ROVAL PROCESS	88
	10.1.Cost	Data Submission Status Codes	88
	10.2.Ques	stion and Answer Exchange	89
APF	PENDIX A	XML OVERVIEW	A
APF	PENDIX B	FUEL COST ADJUSTMENT FUNCTIONALITY	В



Table of Figures

Figure 1: NYISO Home Page	
Figure 2: Expanded NYISO MARKETS Header Showing Categorized Selectable Options	
Figure 3: MARKET ACCESS LOGIN Link	6
Figure 4: Market Access Logins Screen	7
Figure 5: RLS User Login Page	7
Figure 6: RLS Home Page	
Figure 7: Generator Cost Data Menu and Related Options	
Figure 8: Reference Levels Menu and Related Options	
Figure 9: Sample Breadcrumb Trail	
Figure 10: Displaying Multiple Pages of Data	
Figure 11: Sample RLS Links	
Figure 12: Sample Drop-down Filter	13
Figure 13: Sample Calendar and List Filters	
Figure 14: Sample Sorting Controls	
Figure 15: Sample Data Navigation Controls	
Figure 16: Engine Type Groups	
Figure 17: Access Path for Initiating Submission of Cost Data	
Figure 18: Submission Details Page Definitions	
Figure 19: Create New Submission Page	
Figure 20: Reset New Submission Confirmation Prompt	
Figure 21: View Submission Page Reflecting Saved Submission Details	
Figure 22: Links to Modify Submission Details and Add Cost Data Segments and Submission F	
rigure 22. Links to Mouny Submission Details and Add Cost Data Segments and Submission r	
Figure 23: Cost Data Segments Page Definition	
Figure 24: Add Segment Dialog Box	
Figure 25: Links to Modify Cost Data Segments	
Figure 26: Add Submission Family Dialog Box	
Figure 27: Means of Selecting a Generator Family for Modification	
Figure 28: Link to Modifying Generator Contacts	
Figure 29: Generator Contacts Page Definition	
Figure 30: Generator Contacts Page	
Figure 31: Heat Rate Details Page Definition	
Figure 32: Heat Rate Data Segments Page Definition	
Figure 33: Heat Rate Data Page	
Figure 34: Link to Modifying Heat Rate Data	
Figure 35: Fuel and Emission Cost Data Page Definition	
Figure 36: Fuel Types Available as of October 1, 2018	
Figure 37: Emission Types Available as of September 1, 2010	
Figure 38: Add Fuel Cost Data Page	
Figure 39: Link to Adding Emission Costs	
Figure 40: Add Emission Dialog Box	
Figure 41: Links to Modifying Fuel Cost and Emission Data	
Figure 42: Startup Fuel Type Page Definition	
Figure 43: Startup Intervals Page Definition	
Figure 44: Add Startup Fuel Dialog Box	39
Figure 45: Links to Modifying Startup Fuel Cost Data	40
Figure 46: Variable Production & Operating Maintenance Costs Page Definition	40
Figure 47: Regulatory & Related Costs Page Definition	
Figure 48: Variable Production/O&M Costs Page	
Figure 49: Regulatory & Related Costs Page	



Figure	50:	Links to Modifying Variable Production & Operating and Maintenance Costs and Regula	
		Related Costs	
		Emergency Output Details Page Definition	
		Opportunity Cost Details Page Definition	
Figure	53:	Risk Premium Details Page Definition	44
Figure	54:	Emergency Output Details Dialog Box as Accessed from Risk & Opportunity Cost Data	
Figure	55:	Add Opportunity Cost Page	
		Add Risk Premium Page	
Figure	57:	Links to Modify Emergency Output Details, Opportunity Cost Details, and Risk Premium	n Details
Figure	58:	Regulation Movement Cost Details Page Definition	
		Link to Adding Ancillary Services Family	
		Link to Entering Regulation Movement Cost Components	
		Regulation Movement Costs	
		Copy Submission Link	
		Copy Submission Dialog Box	
Figure	64:	Remove Submission Link	53
		Remove Submission Confirmation Prompt	
		Rescind Submission Link	
		Rescind Submission Confirmation Prompt	
		View Summary Link	
		Submission Summary with Violations (Errors)	
		Submission Summary	
		Submit For Approval Link	
		Cost Data Submission Confirmation Prompt Reflecting Submission Level Drop-down Li	
		Submission for Approval with Violations (Errors)	
		Successful RLS Submission for Approval	
		Submission Violations	
_		Compare Link	
		Approved Cost Data on Compare Cost Data Page	
		Other Cost Data Submissions on Compare Cost Data Page	
		Side-by-Side Cost Data Comparison	
		Attachments Link	
Figure	81:	Attachment Upload File Link	67
Figure	82:	Mechanisms for Selecting an Attachment File for Upload and Submitting or Canceling U	Jpload
Figure	83:	View Cost Data Attachments Page Reflecting Uploaded Attachments and Related Option	ons
-	٠,	N" - O (-1) 1	
		View Comments Link	
		Comments Dialog Box	
		Access Path for Uploading an XML Cost Data File	
Figure	87:	Link to CDS Schema Definitions	72
Figure	88:	Mechanisms for Selecting an XML File for Upload and Submitting or Canceling Upload	73
		XML Upload Cost Data Submission	
		Download Submission Link	
		Cost Data Submission XML File Download Dialog Box	
		Excerpt from Sample Downloaded Cost Data Submission XML File	
		Access Path for Viewing Cost Data Submissions	
Figure	94:	List Cost Data Submissions	77
		Access Path for Initiating Display of Approved Cost Data	
		Options for Viewing Approved Cost Data	
Figure	97:	Access Path for Initiating Display of Reference Level Values	80



Figure 98 : List Reference Levels for Market Date	81
Figure 99: List Final Reference Values Page Illustrating Filter Options and Links to Details	81
Figure 100: Example of Final Reference Values Detail	82
Figure 101: Notification Triggers, Recipients, and Messages	83
Figure 102: Home Page Illustrating Notifications and Acknowledgment LinkLink	85
Figure 103: Notification Acknowledgment Confirmation Prompt	85
Figure 104: Notification History Display Filtering Options	86
Figure 105: Home Page Illustrating Pending Submissions	87
Figure 106: Rejected Component Among Approved Components for a Rejected Cost Data Subm	nission
	89
Figure 107: View Approval Questions Link	90
Figure 108: Sample Approval Question and Response	90



Revision History

Version	Date	Revisions
1.0	10/19/2010	Initial Release
1.1	6/13/2011	B265 : RLS Enhancements 2011
		Section 3.1 > Update Table: Engine Type Groups; rename 'FlyWheel' to 'LESR'
		Section 3.3.1.5.2
		> Add new Fuel Type Id : '36 Exclude'
		Section 3.3.6.1 > Add new Submission Violation to table 3-17 'Missing Engine Type'.
		Section 7.1
		Update to include Time Based Reference Levels are viewable to user
		Update forms for 'List Reference Levels'
1.2	6/12/2012	B282: RLS 2012 Enhancements project
		Section 3.3.1.6.1 Table 3-11 Startup Intervals Page Definition * Cost field range was 0-999999.99 and is now -999999.99 to 999999.99
		Section 3.3.1.7.1 Table 3-13 Regulatory & Related Costs Page Definition
		> * Cost field range was 0-999.99 and is now -999.99 to 999.99
		Section 3.3.1.8.1 Table 3-15 Opportunity Cost Details Page Definition
		> * Cost field range was 0-999.99 and is now -999.99 to 999.99
		Section 3.3.1.8.1 Table 3-16 Risk Premium Details Page Definition
		* Cost field range was 0-999.999 and is now -999.999 to 999.999
1.3	06/21/2013	Section 3.3.1.9
	, ,	 New Section detailing process for entering costs pertaining to Regulation Movement Cost
		Section 3.3.6.1
		➤ New violation "Missing Ancillary Cost Data" added to Table 3-18
2.0	05/13/2019	Applied new NYISO Corporate branding and updated screen shots for new NYISO website.
		Section 1.3 > Updated Customer Service to Stakeholder Services
		Section 2.2



 Updated Customer Relations to Member Relations and added Stakeholder Services Section 2.3 Updated Login process from current NYISO Web Portal Section 3.3.1.6.2 Expanded verbiage to include expectations of providing Startup cost data
Section 3.3.1.9
 Expanded verbiage to include expectations of providing Regulation cost data



1. Introduction

This user guide is intended for Market Participants (MPs) who are users of the NYISO Reference Level Software (RLS) application. This user guide has been organized in the following fashion:

- <u>Section 1</u> serves as a general introduction.
- Section 2 describes the hardware and software requirements to access the RLS application.
- Section 3 describes the requirements to create, download, copy, remove, rescind, view, submit, and compare a Cost Data Submission in the RLS application. In addition, this section describes how to create an attachment and comments for a Cost Data Submission.
- Section 4 describes the requirements to upload a Cost Data Submission in the RLS application.
- Section 5 describes the requirements to list Cost Data Submissions in the RLS application.
- Section 6 describes the requirements to view approved cost data in the RLS application.
- Section 7 describes the requirements to view Reference Levels in the RLS application.
- <u>Section 8</u> describes the requirements to view notifications in the RLS application.
- <u>Section 9</u> describes the requirements to view pending submissions in the RLS application.
- Section 10 describes the approval process for a cost data submission, by indicating the different states of a cost data submission.
- Appendix A provides an overview of the XML schemas used by RLS to upload and download Cost Data Submissions.
- Appendix B describes the /Fuel Cost Adjustment (FCA) functionality that allows a MP to enter a fuel type and fuel cost to update a Reference Level.

Note: Some screenshots in this user's guide were captured after resizing the application's window. This may have caused the application to wrap within the window and appear slightly different as compared to viewing in a fully-sized browser window. Some screenshots were cropped for ease of presentation.

1.1. Definition of a Reference Level

A Reference Level is a "proxy" that is intended to reflect the offer(s) that a Market Participant would submit for a generator if it was in a competitive market and could not exercise Market



Power. The methods used to develop Reference Levels are set forth in Attachment H to the NYISO *Market Administration and Control Area Services Tariff (Services Tariff)*¹.

1.1. Description of the Reference Level Software Application

The RLS Application is a user-friendly, secure, Web-based application. The RLS Application includes features that support the requirements to submit cost-based data.

This guide aids MPs in developing cost based Reference Levels. Cost based is only one of several valid methods of developing Reference Levels as set forth in Attachment H to the NYISO Services Tariff. The Reference Levels that the NYISO actually uses may be Bid-Based, LBMP-Based, ISO-Determined, Cost-Based, or a combination of these Reference Level types.

1.2. Reference Level Software Application Users

The community of users for the RLS Application is MPs.

1.3. Obtaining Help and Handling Error Messages

When help is required while using the RLS application, please contact your Stakeholder Services Representative.

This application will display an error message whenever an error condition is triggered by user action. These messages will be displayed in an error window including information about the detected error. After reading the error message, close the window and proceed accordingly. If additional help or information is needed, please contact your NYISO Stakeholder Services Representative.

¹ https://www.nyiso.com/regulatory-viewer.



2. System Requirements

This section describes the computer requirements for the user to run the RLS Application.

2.1. Computer Hardware and Software

The following are required to run the RLS Application:

- Microsoft Internet Explorer (version 7.0) **OR** Mozilla Firefox (version 3.0) with Java Script enabled.
- Minimum 1024x768 screen resolution
- Internet connection with a recommended connection speed of at least 56 kbps
- Adobe Acrobat Reader

2.2. Digital Certificates and Market Information System Privileges

All users must have a valid NAESB digital certificate installed on their respective computers, linked to the user's MIS account and specific to their respective browsers in order to access the RLS application. For more information on digital certificates (including applying, exporting, obtaining, installing, and validating), please see the NYISO Market Participants User's Guide, accessible from the **User Guides** folder on the NYISO Web site at the following URL:

https://www.nyiso.com/manuals-tech-bulletins-user-guides

Existing Market Information System (MIS) accounts need to be set-up with RLS privileges. At the organization level, this must be done by the NYISO. Once the organization is set up with the necessary privileges, the organization's MIS Administrator may then assign RLS privileges at the user level. If the MIS does not reflect the RLS MP View References, RLS MP Update Costs, or RLS **MP View Costs** privileges in the **Privileges** area of the Organization Details display for your organization, contact the NYISO Member Relations or Stakeholder Services group as outlined in the section of the NYISO Market Participants User's Guide on Changing Privileges/Authorizations, Contact Information, and Classifications.

2.3. Accessing and Exiting the Reference Level Software (RLS) Application

To log in to the RLS application

Note: In order to access the RLS application, the user must have RLS privileges.

2.4. Accessing and Exiting the Reference Level Software (RLS) Application



To log in to the RLS application

Note: In order to access the RLS application, the user must have RLS privileges.

1. Point your browser to the NYISO Home Page at www.nyiso.com (see Figure 1).

Figure 1: NYISO Home Page




On the NYISO Home page, position your cursor over the $\boldsymbol{MARKETS}$ header. 2.

The header expands to list related categories of information (see Figure 2).




Figure 2: Expanded NYISO MARKETS Header Showing Categorized **Selectable Options**

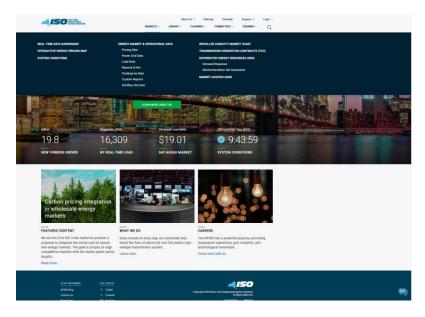

3. Click on the Market Access Login link (See Figure 3).




Figure 3: MARKET ACCESS LOGIN Link

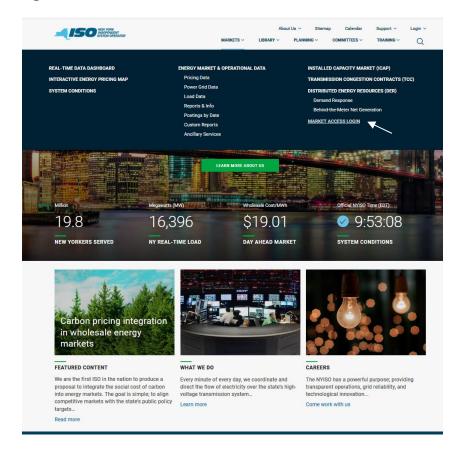

The webpage displays the User Login link (see Figure 4). 4.



Figure 4: Market Access Logins Screen

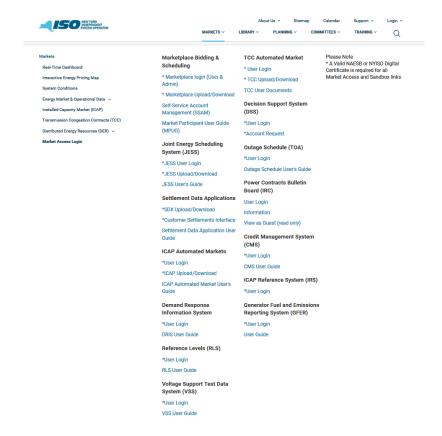

5. The Reference Level Software Login page is displayed (as shown in Figure 5, following).

Figure 5: RLS User Login Page



6. In the corresponding fields, type your MIS Username and Password.

Note: The password is case sensitive.

7. Activate the **Login** button.



By default, following a login, the RLS Home page is displayed (as shown in Figure 6).

Figure 6: RLS Home Page



From this screen you can view Notification messages and Pending Submissions. Additionally, the logoff (Logout) button is on this page.

To log out of the Reference Level Software (RLS) Application

In the upper-right corner of the application window, click the **Logout** link (as shown in Figure 6).

2.5. Working with the System Interface

The term *system interface* refers to the composite mechanisms displayed on screen that provide for interaction with a system. Key RLS interface components include the following:

- Menus
- Breadcrumbs
- **Pages**
- Links
- **Filters**
- Configuration controls
- Data navigation controls

2.5.1. Menus

Menus allow users to initiate the various tasks made possible by the system. In RLS, menus are accessed by clicking a heading in the static bar always displayed across the top of the interface.



For example, the *Generator Cost Data* menu, illustrated in Figure 7, provides access to the following additional pages:

- Create New Submission,
- Upload Cost Data,
- List Submissions, and
- View Approved Cost Data.

The Reference Levels menu, illustrated in Figure 7, provides access to the List Reference Levels page and the *Export Reference Levels* page.

Figure 7: Generator Cost Data Menu and Related Options

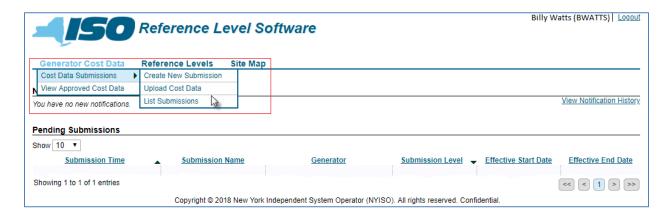


Figure 8: Reference Levels Menu and Related Options




2.5.2. Breadcrumbs

A breadcrumb trail allows users to keep track of their location within the RLS application and provide links back to each previous page navigated through, to get to the current page. The user is allowed to go back to a previous location within the breadcrumb trail by clicking on the link.

Figure 9 illustrates a breadcrumb trail within the Cost Data Submission process.



Figure 9: Sample Breadcrumb Trail

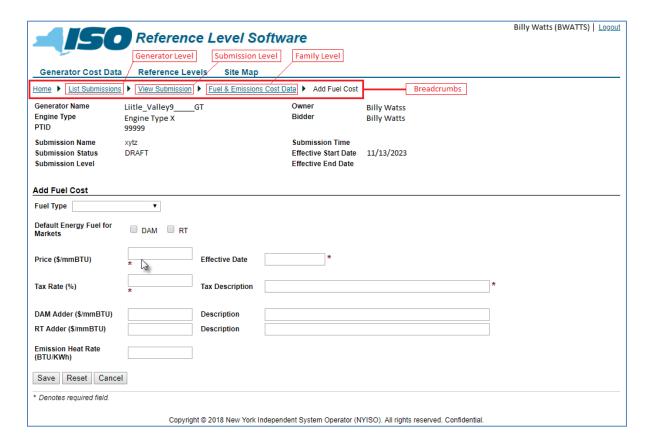


2.5.3. Pages

Pages gather and display all controls specific to a request. They can be invoked by the RLS application or by the user choosing an option from one of the system menus. Figure 10 illustrates the result of requesting RLS to List Submissions, which results in a display of multiple sub-pages that can be navigated with the corresponding controls.



Figure 10: Displaying Multiple Pages of Data

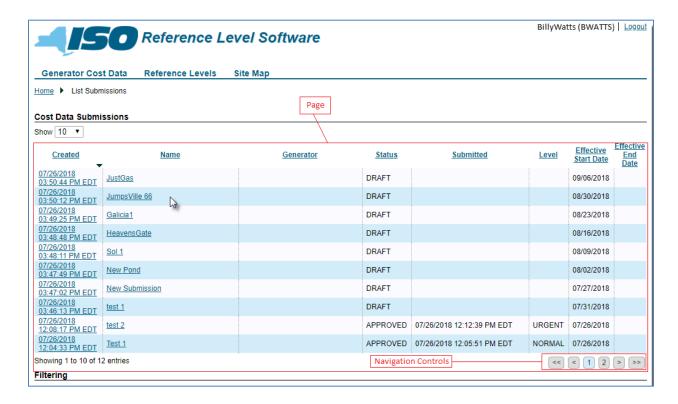


2.5.4. Links

Links allow the user to navigate to other pages within the RLS application. Links are typically specific to the current page the user is accessing. Figure 11 illustrates multiple links that are available on the View Submission page.



Figure 11: Sample RLS Links

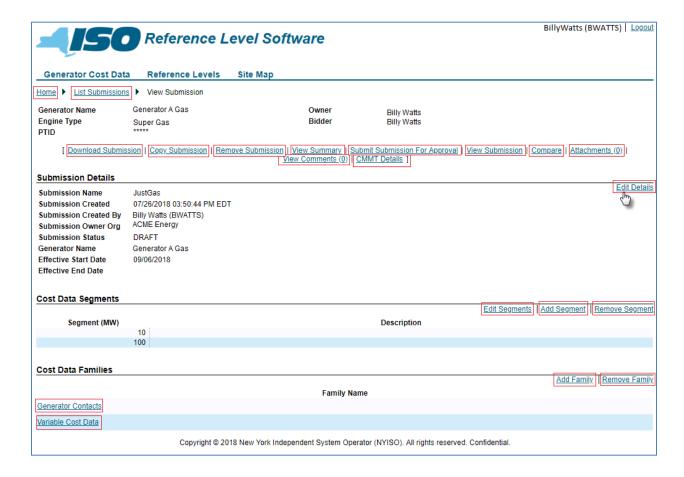

2.5.5. Filters

Filters are controls that allow the user to define the scope of a task by selecting system-defined values for one or more system-defined parameters.

1. In the RLS application, drop-down filters are used, for example, to limit the Generator Name values to the specific generators that the user has authorization to view (Figure 12). In addition, filters are used to narrow the scope of data to be displayed when performing a specific task (Figure 13).



Figure 12: Sample Drop-down Filter


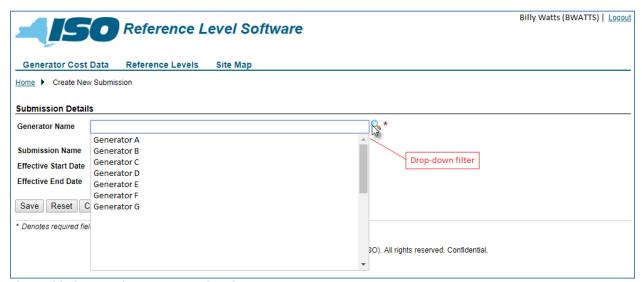


Figure 13: Sample Calendar and List Filters



Note: User can select more than one field in the List Filters by pressing CTRL then clicking the primary mouse button.

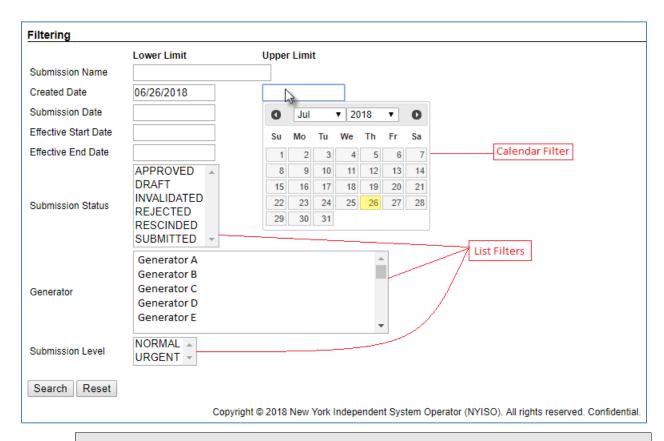

2.5.6. Sorting Controls

Sorting controls allow changing the order in which data is displayed.


Figure 14 illustrates the RLS List Submission page, where submissions for a selected generator are listed, and the user has the ability to change the sort order for each column displayed.

To control the parameter by which data are sorted

Click the column heading to reverse the sort order.

Note: Any change in sort order persists until either a subsequent sorting change is requested or the page in question is exited.

Figure 14: Sample Sorting Controls

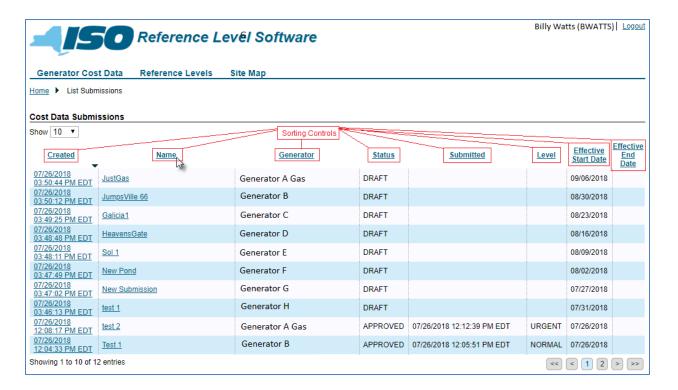


2.5.7. Page Navigation Controls

Data can be navigated by various mechanisms. Scroll bars, which are located on the right side and/or bottom of frames, allow for viewing data that is present on the active page. In addition, the RLS application provides controls (Figure 15



) that, when selected, provide movement between multiple pages of data.

Figure 15: Sample Data Navigation Controls

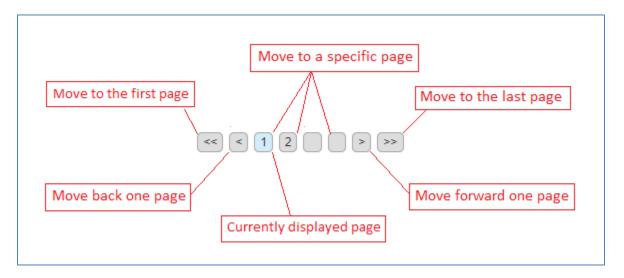



3. Cost Data Submission

This section describes the RLS application's Cost Data Submission process and all the additional functionality available regarding cost data, outlining the process' sequence of activities.

Note: The RLS application also provides an XML upload option for Cost Data Submissions, which is described in Section 4.

3.1. Grouping of Engine Types

The requirements for creating a Cost Data Submission vary based on the engine type group of the generator unit. Subsequent sections of this user guide provide the page definitions and requirements of the engine type group for the data presented on the page. Additionally, the engine type group determines the validation template when using the upload/download XML functionality (Section 3.3.2 and Section 4). Group A uses require all fields, group B is for units that do not bid a MinGen, group C is for units that may or may not enter a fuel price, and group D is for units with no fuel price.

The engine type groups are detailed in Figure 16.

Figure 16: Engine Type Groups

Α	В	С	D
Fossil - Coal Mix > 100MW	GT - Frame 5	Fossil - Landfill Gas	Hydro - Pumped Storage
Fossil - Coal Mix < 100MW	GT - Frame 7	Fossil - Wood	Hydro - Run of River
Fossil - Gas and/or Oil > 350 MW	GT - 7EA	Fossil - Refuse	Hydro - Reservoir
Fossil - Gas and/or Oil < 350 MW	GT - LM 6000	Nuclear	Wind
Combined Cycle - Frame 5/6	GT - LM 6000 Sprint	Other	Solar
Combined Cycle - 7FA	GT - PW		LESR
Combined Cycle - 7EA	GT - Simple Cycle		Demand Side Ancillary Service Provider
Combined Cycle - LM 6000	GT - Other		
Combined Cycle - 501G	Diesel		
Combined Cycle - V64.3			
Combined Cycle - V84.2			
Combined Cycle – Other			
Combined Cycle – Siemens SGT6 – 5000F			



Α	В	С	D
Rolls Royce Trent 60			
Reciprocating Engine			
Load Monitor			

Note: The engine type groups are used to define the cost data input requirements for validation.

These engine type groups will be used in subsequent sections when describing the Cost Data Submission requirements.

3.2. Cost Data Submission Components

A Cost Data Submission comprises three main components: Submission Details, Cost Data Segments, and Submission Families. The Submission Families component is further categorized into sub-components (families) that include Generator Contacts, Heat Rate Data, Fuel & Emission Cost Data, Startup Cost Data, Variable Cost Data, Risk & Opportunity Cost Data, and Ancillary Services Data.

When creating a Cost Data Submission, data requirements for each component vary based on the engine type group (Section 3.1).

> Note: Refer to the conditions matrix under the Page Definitions section for each component input

When creating an initial Cost Data Submission for a generator unit, each component is required, while the *data required* in each component will be driven by the engine type group.


The sections below list and describe all the data items within each component along with identifying the data requirements by engine class.

3.3. Cost Data Submission Entry Process

A new submission can be initiated via the *Generator Cost Data* menu by choosing the *Create New Submission* option (Figure 17); the user is then prompted to enter cost data for all components mentioned in <u>Section 3.2</u>.



Figure 17: Access Path for Initiating Submission of Cost Data

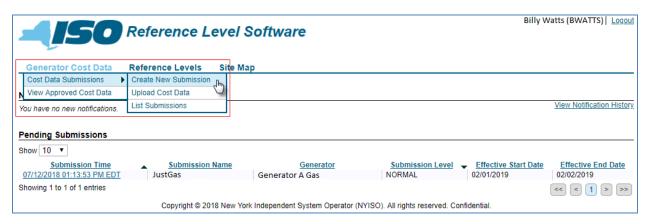

3.3.1. Create a Cost Data Submission

The following sections detail the requirements to create a cost data submission. The sections will be outlined by the individual components. For each component, a table is provided to list and describe the data in each page, along with indicating by engine class, whether the data field is required, optional, conditionally required, or not applicable.

Note: As a user creates each cost data component, the submission is saved in DRAFT mode.

3.3.1.1. Submission Details

3.3.1.1.1. **Page Description**

Figure 18: Submission Details Page Definitions

				Eng	ine Ty	pe Gro	up
Page Field	Data Type	Editable	Description	Α	В	С	D
Generator Name	Text	N	Chosen from a drop-down list of generator units that the user is authorized for, determined by logon id.	R	R	R	R
Submission Name	Text	Y	Name entered to identify the Cost Data Submission. Entered as 30-character free-form text.	R	R	R	R
Effective Start Date	Date	Y	Start Date of a Cost Data Submission entered as mm/dd/yyyy or chosen from the calendar application.	R	R	R	R




Effective End Date	Date	Y	End Date of a Cost Data Submission, entered as mm/dd/yyyy or chosen from the calendar application. Note: A blank value in this field will designate the cost data as open-ended (i.e., the data entered is effective until a new Cost Data is	0	0	0	0
			submitted).				
				R = Re	equired		
				O = O	otional		
				CR = 0	Condition	ally requ	ired
				NA = N	Not applic	able	

3.3.1.1.2. **How to Enter Submission Details**

Upon accessing the *Create New Submission* page, illustrated in Figure 19, the user then selects a generator from an RLS-prepared list pre-determined based on the user's logon credentials and role. The user will also enter a Submission Name, Effective Start Date, and optional Effective End Date.

Figure 19: Create New Submission Page

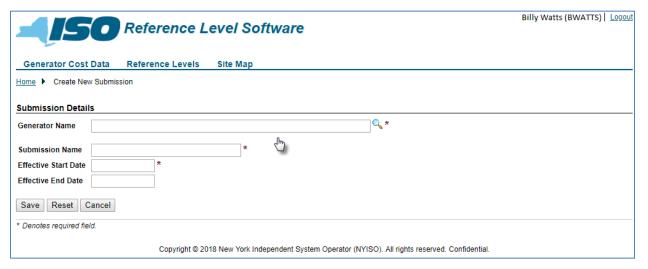

Next, the user has the following options:


- **Save**, to save the data in *DRAFT* form(see Figure 21).
- Reset, to remove all data entered, returning the screen to its original state (see Figure 20).
- **Cancel**, to return the user to the RLS home page.

Note: The Submission Name is an MP-defined value to facilitate keeping track of submissions.

Effective Start Date must be greater than or equal to the current date.




Figure 20: Reset New Submission Confirmation Prompt

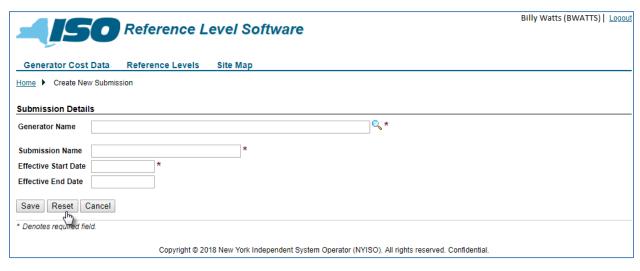

Once the user has invoked the **Save** action, the application saves the submission in Draft form and displays the *View Submission* page (see Figure 21).

Figure 21: View Submission Page Reflecting Saved Submission Details

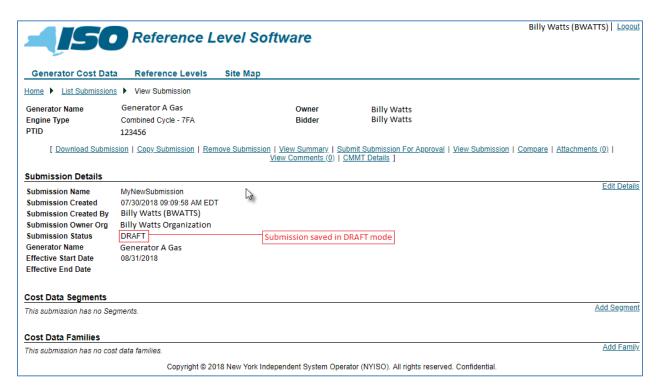


At this point the user can take several actions like: edit the Submission Details, add Cost Data Segment(s), and add Submission Families (see



Figure 22). To do these actions, the user will activate the Edit Details, Add Segment, or Add **Family** link to invoke the applicable page.

Figure 22: Links to Modify Submission Details and Add Cost Data Segments and Submission Families

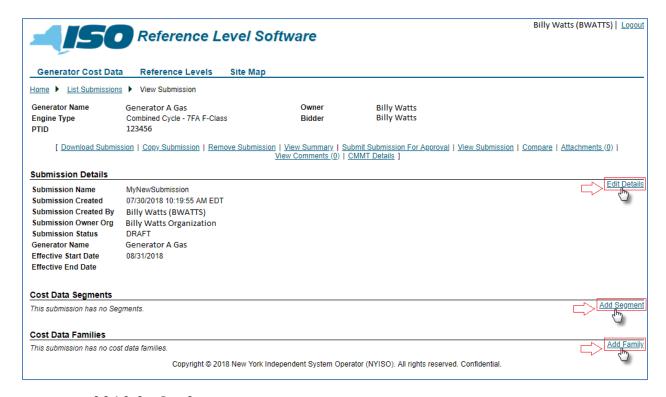

3.3.1.2. Cost Data Segments

3.3.1.2.1. **Page Descriptions**

Figure 23: Cost Data Segments Page Definition

				Engine Type Group			up
Page Field	Data Type	Editable	Description	A	В	С	D
Segment Value	Numeric	Y	MP-specified megawatt breakpoint values. The associated megawatt output value for the segment. Entered as a value 00 – 10000. Note: User is required to enter a minimum of one segment value for a generator.	R	R	R	R
Description	Text	Υ	Text entered to describe the segment and the associated output. Entered as 100-character free-form text.	0	0	0	0
				R = Required O = Optional CR = Conditionally Required NA = not applicable		uired	

3.3.1.2.2. **How to Enter Cost Data Segments**



Via the page illustrated in Figure 24, the user can add Cost Data Segments. The user is required to enter a minimum of one segment value for the Cost Data Submission for a new generator. To add a segment, the user is required to enter a Segment Value, while the Description is optional. Once the first segment has been added and saved, the user will have the ability to add additional segments, edit existing segment descriptions, and remove segments (see Figure 25).

> Note: The user is required to create segments up to greater than or equal to their MIS Upper Operating Limit.

> When editing a cost data segment, the user can make changes to the description only. The user is not allowed to change the value of an actual segment. To perform this task, the user will delete the existing segment then add a new segment.

> All megawatt output values created will automatically populate the appropriate identical references throughout the pages.

Figure 24: Add Segment Dialog Box


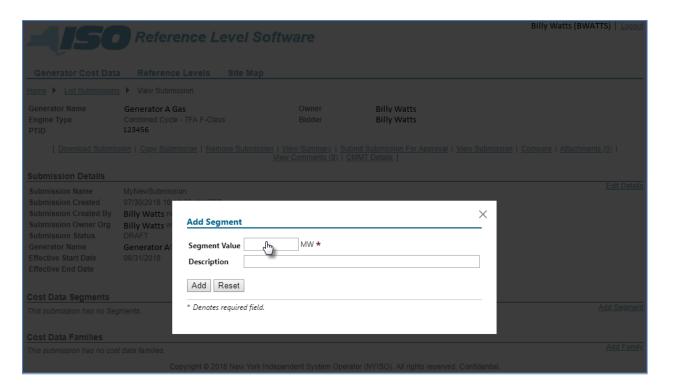





Figure 25: Links to Modify Cost Data Segments

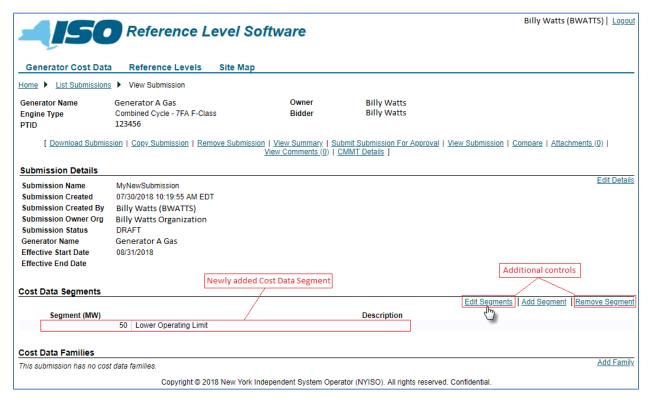

Next, the user can add each of the Submission Families. To add a Submission Family the user invokes the **Add Family** link then, from the drop-down list, chooses which family to add (see Figure 26).



Figure 26: Add Submission Family Dialog Box

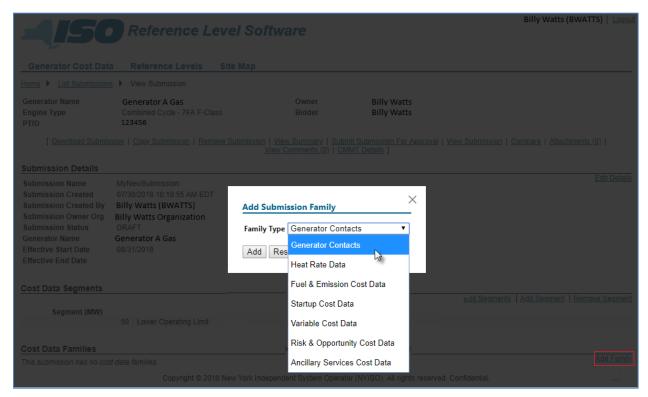


After saving a Submission Family, the user has the option of selecting that family and editing the information (Figure 27 and Figure 28).

> Note: For an initial Cost Data Submission, the MP needs to access each submission family, even if no data is to be entered for that family. This is done to acknowledge completeness of the Cost Data Submission.

In Figure 27, the user has accessed and saved the Generator Contacts and Heat Rate Data families.



Figure 27: Means of Selecting a Generator Family for Modification

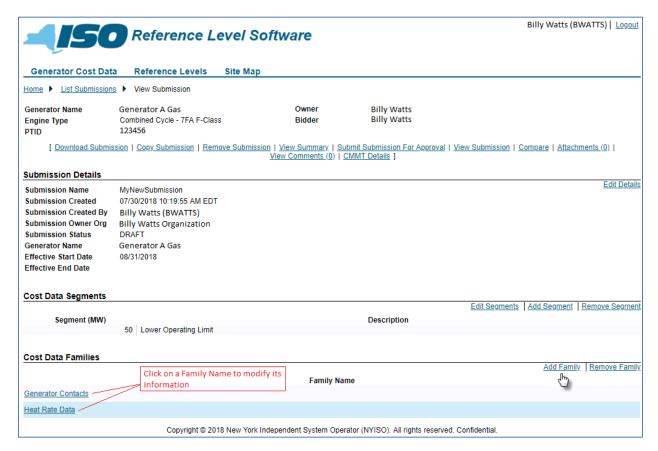

By using the **Generator Contacts** link, the user will be allowed to enter the **Generator** Contacts page. By selecting the Edit Generator Contacts link (Figure 28) the user will be able to modify the submission's contact information.



Figure 28: Link to Modifying Generator Contacts



3.3.1.3. Generator Contacts Data

3.3.1.3.1. **Page Descriptions**

Figure 29: Generator Contacts Page Definition

				Engine Type Group			
Page Field	Data Type	Editable	Description	A	В	С	D
Unit Designation	Numeric	Υ	Text entered to describe the unit designation. Entered as 100-character free-form text.	0	0	0	0
Commercial Date	Text	Y	te that generator unit is considered to be in commercial operation. Entered as mm/dd/yyyy or chosen from the calendar application	R	R	R	R
Reference Price Primary Contact Name	Text		The name of the primary contact person, regarding the reference price for a generator unit. Entered as 100-character free-form text.	R	R	R	R
Reference Price Primary Contact Phone	Text	Y	The phone number of the primary contact person, regarding the reference price for a generator unit. Entered as 30-character freeform text.	R	R	R	R



	ı			Engine Type Group			
Page Field	Data Type	Editable	Description	A	В	С	D
Reference Price Primary Contact E-mail	Text	Y	The e-mail address of the primary contact person, regarding reference price of the generator unit. Entered as a valid e-mail address (e.g. address@domain.com) up to 100 characters.	R	R	R	R
Owner Primary Contact Name	Text	Y	The name of the primary contact person, for the owner of the generator unit. Entered as 100-character free-form text.	R	R	R	R
Owner Primary Contact Phone	Text	Y	The phone number of the primary contact person, for the owner of the generator unit. Entered as 30-character free-form text.	R	R	R	R
Owner Primary Contact E-mail	Text	Y	The e-mail address of the primary contact person, for the owner of the generator unit. Entered as a valid e-mail address (e.g. address@domain.com) up to 100 characters.	R	R	R	R
Bidder Primary Contact Name	Text	Y	The name of the primary contact person, regarding bidding for the generator unit. Entered as 100-character free-form text.	R	R	R	R
Bidder Primary Contact Phone	Text	Y	The phone number of the primary contact person, regarding bidding for the generator unit. Entered as 30-character free-form text.	R	R	R	R
Bidder Primary Contact E-mail	Text	Y	The e-mail address of the primary contact person, regarding bidding for the generator unit. Entered as a valid e-mail address (e.g. address@domain.com) up to 100 characters	R	R	R	R
Reference Price Secondary Name	Text	Y	The name of the secondary contact person, regarding the reference price for a generator unit. Entered as 100-character free-form text.	0	0	0	0
Reference Price Secondary Phone	Text	Y	The phone number of the secondary contact person, regarding the reference price for a generator unit. Entered as 30-character freeform text.	0	0	0	0
Reference Price Secondary E-mail	Text	Y	The e-mail address of the secondary contact person, regarding the reference price for the generator unit. Entered as a valid e-mail address (e.g. address@domain.com) up to 100 characters	0	0	0	0
Owner Secondary Name	Text	Y	The name of the secondary contact person, for the owner of the generator unit. Entered as 100-character free-form text.	0	0	0	0
Owner Secondary Phone	Text	Y	The phone number of the secondary contact person, for the owner of the generator unit. Entered as 30-character free-form text.	0	0	0	0
Owner Secondary E-mail	Text	Y	The e-mail address of the secondary contact person, for the owner of the generator unit. Entered as a valid e-mail address (e.g. address@domain.com) up to 100 characters	О	0	0	Ο



				Engi	пе Тур	e Gro	up
Page Field	Data Type	Editable	Description	Α	В	С	D
Bidder Secondary Name	Text	Y	The name of the secondary contact person, regarding bidding for the generator unit. Entered as 100-character free-form text.	0	0	0	0
Bidder Secondary Phone	Text	Y	The phone number of the secondary contact person, regarding bidding for the generator unit. Entered as 30-character free-form text.	0	0	0	0
Bidder Secondary E-mail	Text	Y	The e-mail address of the secondary contact person, regarding bidding for the generator unit. Entered as a valid e-mail address (e.g. address@domain.com) up to 100 characters	0	0	0	0
General Comments	Text	Y	Free-form area, entered as 4000-character free-form text	0	0	0	0
				R = Re	quired		


O = Optional CR = Conditionally Required NA = not applicable

3.3.1.3.2. **How to Enter Generator Contacts**

The Generator Contacts page (Figure 30) is used to enter or modify administrative data for the generator, including information for the both the primary and secondary contacts.



Figure 30: Generator Contacts Page

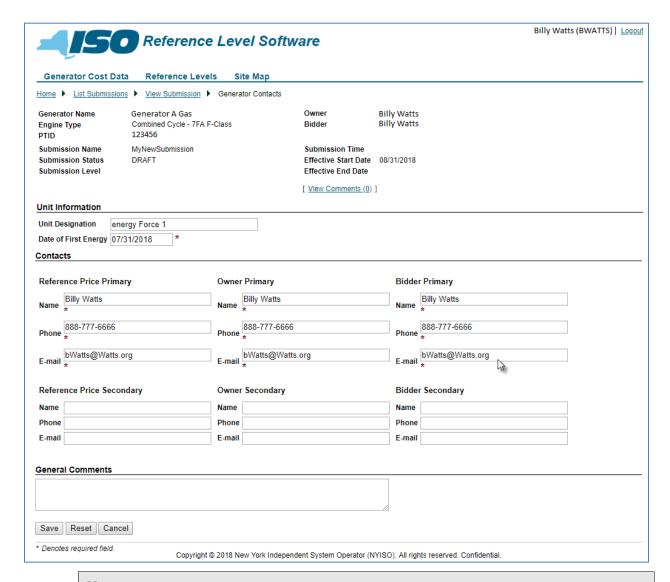

Note: Once the data has been saved via activation of the corresponding button, the user always has the option to Edit Generator Contacts data by invoking the Edit Generator Contacts link (see Figure 30 above) then completing the additional necessary actions. The MP is responsible for keeping its contact information up to date.



3.3.1.4. Heat Rate Data

3.3.1.4.1. **Page Descriptions**

Figure 31: Heat Rate Details Page Definition

				Eng	Engine Type Group		
Page Field	Data Type	Editable	Description	Α	В	С	D
Unit Minimum Generation (MW)	Numeric	N	The minimum operating level for a generator unit. Drop-down values populated from Cost Data Segments.	R	R	R	R
Heat Input at Min Gen (mmBTU/hour)	Numeric	Y	The heat input required to bring a generator unit to minimum generation. Entered as value 0 – 99999.	0	0	0	0
Unit Capacity (MIS)	Numeric	N	Automatically populated from MIS data.	NA	NA	NA	NA
Unit Capacity (RLS)	Numeric	Y	The maximum value (in megawatts) at which generator unit can operate. Entered as value 0 – 9999.99	R	R	R	R
				R = Required O = Optional CR = Conditionally Required NA = not applicable		uired	

Figure 32: Heat Rate Data Segments Page Definition

				Eng	Engine Type Group		
Page Field	Data Type	Editable	Description	A	В	С	D
Segment (MW)	Numeric	N	Automatically populated from Cost Data Segments component.	R	R	R	R
Incremental Heat Rate (BTU/KWh)	Numeric	Y	Heat rate by segment. Entered as value 0 – 99999.	0	0	0	0
				R = Required O = Optional CR = Conditionally Required NA = not applicable		uired	

3.3.1.4.2. **How to Enter Heat Rate Data**


The *Heat Rate Data* page (Figure 33) is used to enter a generator unit's heat rate information. The *Heat Rate Details* page allows the user to choose the generator unit's minimum generation value from a drop-down list of the values previously entered via the *Cost Data Segments* page. The user will also enter a value for the generator unit's capacity. The page displays the generator unit's capacity as stored in the MIS.



The heat rate segments on this page are brought forward from the segments that were entered on the Cost Data Segments page. The user enters the heat rate as a numeric value representing the BTU/KWh for that segment of the generated power.

Note: Heat rates are incremental heat rates and **must** be monotonically increasing.

Figure 33: Heat Rate Data Page

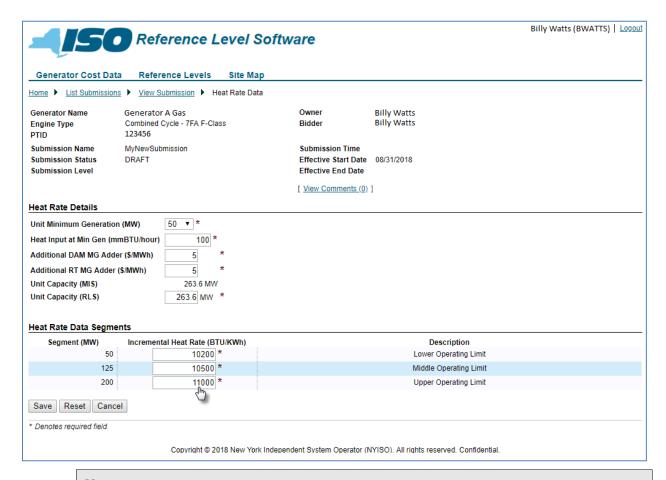


Note: Once the data has been saved via activation of the corresponding button, the user always has the option to Edit Heat Rate data, by invoking the corresponding link (Figure 34) then completing the additional necessary actions.

If a cost data segment is deleted, its associated heat rate data is automatically deleted as well.



Figure 34: Link to Modifying Heat Rate Data

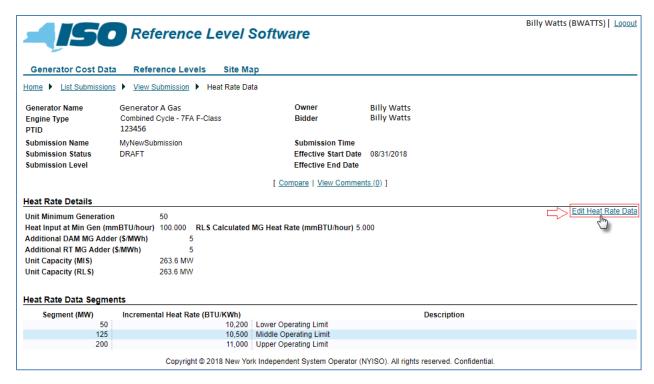

3.3.1.5. Fuel and Emission Cost Data

3.3.1.5.1. **Page Definitions**

Figure 35: Fuel and Emission Cost Data Page Definition

				Eng	ine Ty	pe Gro	up
Page Field	Data Type	Editable	Description	Α	В	С	D
Fuel Type	Text	N	Selected from a drop-down list of values from MIS. See Figure 36, on page 33.	R	R	R	R
Default Energy for Markets	Radio Button	N	Checkbox selection for Day-Ahead Market (DAM) and/or Real-Time market (RT)	R	R	R	R
Price (\$/mmBTU)	Numeric	Y	Unburdened (no tax or delivery) price associated to fuel type. Entered as a value 0 – 99.9999.	R	R	0	NA
Effective Date	Text	Y	Effective date of fuel type/price entered as mm/dd/yyyy or chosen from the calendar application.	R	R	0	NA
Tax Rate (%)	Numeric	Υ	Entered as a value 0 – 99.9999999. Applicable ad valorem tax on fuel	R	R	0	NA
Tax Description	Text	Υ	Tax Description, entered as 100-characters of free-form text.	0	0	0	NA



				Eng	jine Ty	pe Gro	oup
Page Field	Data Type	Editable	Description	Α	В	С	D
DAM Adder (\$/mmBTU)	Numeric	Y	Entered as value 0 – 99.99. Applicable flat rate taxes and/or applicable transport and distribution costs and applicable fuel acquisition brokerage fees.	0	0	0	NA
Description	Text	Y	Adder description, entered as 100-characters of free-form text.	0	0	0	NA
RT Adder (\$/mmBTU)	Numeric	Y	Entered as value 0 – 99.99. Applicable flat rate taxes and/or applicable transport and distribution costs and applicable fuel acquisition brokerage fees.	0	0	0	NA
Description	Text	Y	Adder description, entered as 100-characters of free-form text.	0	0	0	NA
Emission Heat Rate (BTU/KWh)	Numeric	Y	Entered as value 0 – 99999.	CR	CR	CR	NA
Emission Type	Text	N	Selected from a drop-down list of values populated from MIS.	R	R	R	NA
Emission Rate (lb/mmBTU)	Numeric	Y	Entered as value 0 – 99.9999.	R	R	CR	NA
Allowance Cost (\$/Ton)	Numeric	Y	Entered as value 0 – 99999.99.	R	R	CR	NA
Allowance Cost Date	Text	Υ	Effective date of allowance value, entered as mm/dd/yyyy or chosen from the calendar application.	R	R	CR	NA
Adder (\$/MWh)	Numeric	Υ	Entered as value 0 – 999.99.	0	0	CR	NA
	1	1	1	R = R	equired	1	<u> </u>

O = Optional

CR = Conditionally Required

NA = not applicable

3.3.1.5.2. **Fuel Type**

Figure 36 lists the current fuel types available as of September 1, 2010.

Figure 36: Fuel Types Available as of October 1, 2018

RLS Fuel Type ID	RLS Fuel Type ID	Fuel Type Detailed Description
1	OIL #6 PRICE INDEX	Argus US Products: Fuel oil No6 0.3% high-pour NYH
3	AVG KEROSENE	Argus US Products: Jet/kerosene 55NYH cargo
4	AVG FUEL OIL #2	Argus US Products: Heating Oil 2000ppm NYH delivered
53	ULSD 15ppm NYH barge	Argus US Products: Diesel 15ppm NYH barge – Low



RLS Fuel Type ID	RLS Fuel Type ID	Fuel Type Detailed Description
58	ULSK 15ppm NYH barge	Argus US Products: Kerosene 15ppm NYH barge – Low
	11	
2	NG TRANSCO Z6NY	Argus North American Natural Gas: Transco Zone 6 NY
31	NG ALGONQUIN	Argus North American Natural Gas: Algonquin City gates
32	NG IROQUOIS	Argus North American Natural Gas: Iroquois Waddington
37	NG DOMINION SP	Argus North American Natural Gas: Dominion South Point
38	NG DOMINION NP	Argus North American Natural Gas: Dominion North Point
43	NG NIAGARA	Argus North American Natural Gas: Niagara
44	NG TEXAS EAST M3	Argus North American Natural Gas: Texas Eastern Zone M3
45	NG COLUMBIA	Argus North American Natural Gas: Col Gas Appalachia
52	NG IROQUOIS Z2	Argus Natural Gas Americas: Iroquois Zone 2 day-ahead index
54	NG TENNESSEE ZONE 6	Argus Natural Gas Americas: Natural gas hub TGP zone 6 day-ahead Index
55	NG NIT/AECO	Argus Natural Gas Americas: Natural gas hub NIT/AECO day-ahead Index
56	NG HENRY HUB	Argus Natural Gas Americas: Natural gas hub Henry Hub day-ahead Index
57	NG TENN Z-4 200 LINE	Argus Natural Gas Americas: Natural gas hub TGP zone 4 day-ahead Index
59	NG DAWN ONTARIO USD	Argus North American Natural Gas: Dawn Ontario
61	NG TENN Z-5 200 LINE	Argus Natural Gas Americas: Natural gas hub TGP zone 5 day-ahead Index
46	75 TRANSCO 25 OIL #6	(blended from daily index price)
47	25 TRANSCO 75 OIL #6	(blended from daily index price)
48	50 TRANSCO 50 OIL #6	(blended from daily index price)
49	80 TRANSCO 20 OIL #6	(blended from daily index price)
50	75 TRANSCO 25 IROQUS	(blended from daily index price)
51	75 OIL #6, 25 IROQUS	(blended from daily index price)
13	COAL ANTHRACITE	(Not indexed)
14	COAL BIT	(Not indexed)
19	COAL COKE	(Not indexed)
22	HYDRO	(Not indexed)
23	NUCLEAR	(Not indexed)
28	REFUSE	(Not indexed)
30	DIESEL	(Not indexed)
33	WIND	(Not indexed)
34	OTHER	(Not indexed)
39	NG LANDFILL	(Not indexed)
40	WOOD	(Not indexed)
41	TIRES	(Not indexed)
42	BIOMASS	(Not indexed)

Note: Fuel Types that are indexed daily, are currently indexed using Argus, the service that the NYISO uses to index fuel types may be subject to change.

Fuel Types that are *not* indexed daily, will have the fuel price entered (RLS) as a static value. The MP should periodically review this data and update as necessary with a Cost Data Submission.

Canned fuel blends are available but require initial set-up by the NYISO.



3.3.1.5.3. **Emission**

Figure 37 lists the emission types available as of September 1, 2010.

Figure 37: Emission Types Available as of September 1, 2010

RLS Emission Type Name	Emission Type Description	Indexed Daily
CO2	CO2: RGGI US Allowance Prompt	Υ
NOx CrossSt Annual	CSAPR NOx US annual assessments	Y
NOx CrossSt Seasonal	CSAPR NOx US seasonal assessments	Y
SO2 CrossState Grp1	CSAPR SO2 US annual assessments	Y

Note: Emission Types that are indexed daily (Y), are currently using Argus, which can be subject to change.

Emission Types that are *not* indexed daily (N), will have the emission price entered (RLS) as a static value. The MP should periodically review this data and update as necessary with a Cost Data Submission.

How to Enter Fuel and Emission Cost Data 3.3.1.5.4.

The Add Fuel Cost page (Figure 38) which can be reached via the Fuel & Emissions Cost Data page, is used to enter the generator fuel and emission costs. For each fuel price entered, the user can add emission costs. When the fuel cost data is saved (Figure 39), the user can invoke the link to add the emission cost (

Figure 40).



Figure 38: Add Fuel Cost Data Page

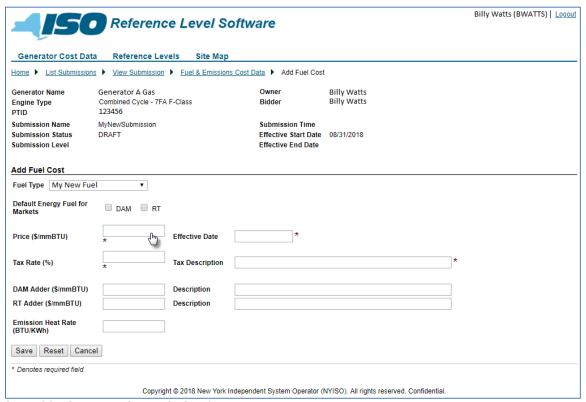


Figure 39: Link to Adding Emission Costs


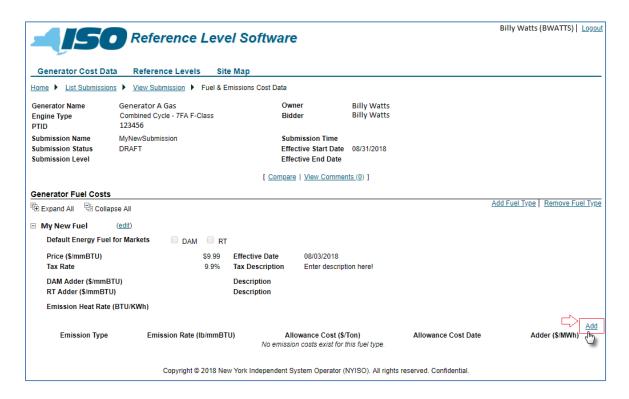




Figure 40: Add Emission Dialog Box

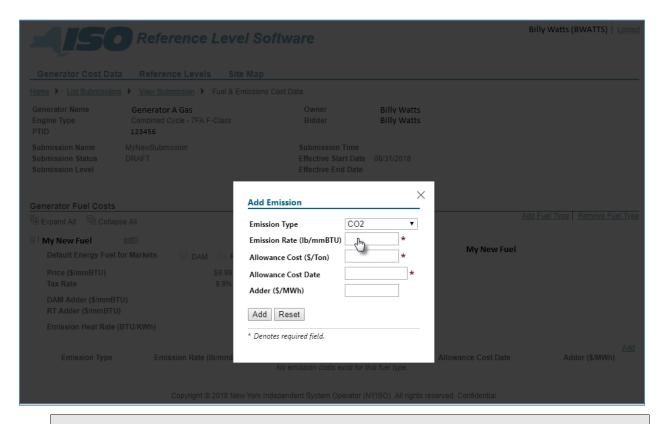

Note: Once the Fuel Cost data and Emission Cost data has been saved via activation of the corresponding button, the user always has the option to Add Fuel Type, Edit Fuel Type, or Remove Fuel Type, or Edit, Add, or Remove Emission Type data, by invoking the applicable link (Figure 41) then completing the additional necessary actions. The Add Fuel Type link is available while there are remaining defined fuel types for that generator to be added.



Figure 41: Links to Modifying Fuel Cost and Emission Data



3.3.1.6. Startup Cost Data

3.3.1.6.1. **Page Definitions**

Figure 42: Startup Fuel Type Page Definition

				Eng	Engine Type Group		
Page Field	Data Type	Editable	Description	Α	В	С	D
Fuel Type	Text	N	Selected from a drop-down list of values populated from MIS.	R	R	R	R
Default Startup Fuel for Markets	Radio Button	N	Checkbox selection for DAM and/or RT.	R	R	R	R
				R = Required O = Optional CR = Conditionally Require NA = not applicable		uired	

Figure 43: Startup Intervals Page Definition

				Engine Type Group			up
Page Field	Data Type	Editable	Description	Α	В	С	D
Relevant Markets	Radio Button	N	Checkbox selection for DAM and/or RT	R	R	R	R
Hours Offline	Numeric	Υ	Also referred to as downtime. Entered as value 01 – 999.	R	R	R	R




				Eng	ine Ty	pe Gro	up
Page Field	Data Type	Editable	Description	Α	В	С	D
Description	Text	Υ	Description for interval. Entered as up to100-character of free-form text.	0	0	0	0
Fuel Required (mmBTU)	Numeric	Υ	Required if a value was entered in Hours Offline. Entered as value 0 – 999999.99.	R	R	CR	CR
Adder (\$/Start)	Numeric	Υ	Entered as value -999999.99 – 999999.99.	0	0	CR	CR
			•	R = Required O = Optional CR = Conditionally Required NA = not applicable		uired	

3.3.1.6.2. **How to Enter Startup Data**

The Startup Cost Data page (Figure 44), is used to enter startup costs for a generator unit. All generators are expected to create a submission that reflects their startup costs.


Figure 44: Add Startup Fuel Dialog Box

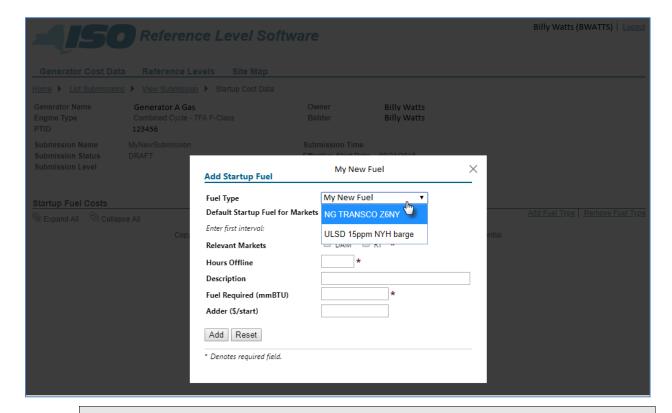

Note: Once the data has been saved via activation of the corresponding button, the user always has the option to Add Fuel Type, Remove Fuel Type, or Edit, Add, or Remove data by invoking the applicable link (Figure 45) then completing the additional necessary actions. The Add Fuel Type option is available if the generator has additional fuel types available.



Figure 45: Links to Modifying Startup Fuel Cost Data

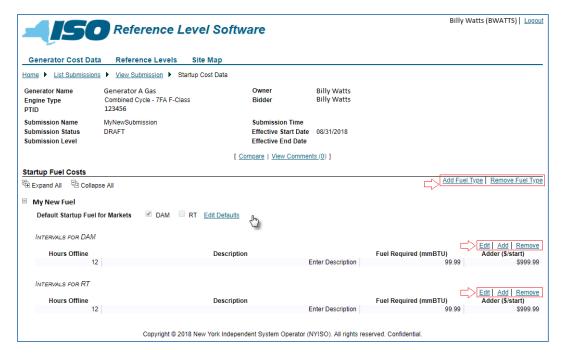

3.3.1.7. Variable Cost Data

This is an optional family for entering variable cost data. Fixed costs are not appropriate.

3.3.1.7.1. **Page Definitions**

Figure 46: Variable Production & Operating Maintenance Costs Page Definition

				Eng	ine Ty	pe Gro	up
Page Field	Data Type	Editable	Description	Α	В	С	D
Segment (MW)	Numeric	N	Pre-populated from Cost Data Segments.				
Var O&M Cost (\$/MWh)	Numeric	Y	Entered as value 0 – 999.99	0	0	0	0
Var O&M Description	Text	Y	Entered as 100-character of free-form text. Note: If you choose to identify a Variable O&M Cost for one or more megawatt segments, A description for each of those megawatts segments is required.	CR	CR	CR	CR
Other Var Cost (\$/MWh)	Numeric	Y	Entered as value 0 – 999.99	0	0	0	0
Other Var Description	Text	Y	Entered as 100-character of free-form text. Note: If you choose to identify any Other Variable O&M Cost for one or more megawatt segments, A description for each of those megawatt segments is required.	CR	CR	CR	CR



				Eng	ine Ty _l	oe Gro	up
Page Field	Data Type	Editable	Description	Α	В	С	D
					tional	ally Requable	uired

Figure 47: Regulatory & Related Costs Page Definition

				Eng	ine Ty	pe Gro	up
Page Field	Data Type	Editable	Description	Α	В	С	D
Source Name	Numeric	N	Name associated to the cost. Entered as 30-character free-form text.	R	R	R	R
Description/ Assumptions	Numeric	Y	Free-form area to describe the source cost. Entered as 4000-character free-form text. Note: If you choose to identify a Regulatory Cost for one or more megawatt segments, Summary Description will be required.	CR	CR	CR	CR
Segment (MW)	Text	Υ					
Cost (\$/MWh)	Numeric	Y	Source cost entered as a value -999.99 – 999.99. Note: Cost is required for a minimum of one segment.	CR	CR	CR	CR
Description	Text	Υ	Entered as 100-character free-form text.	0	0	0	0
	•	•		R = Re O = Op	•		<u>'</u>

CR = Conditionally Required

NA = not applicable

3.3.1.7.2. **How to Enter Variable Cost Data**

The *Variable Production/O&M Cost* page (Figure 48) is used to enter any variable costs that pertain to the operating and maintenance costs for a generator unit. In addition, this page allows the user to enter regulatory and other costs (

Figure 49) that are deemed important in calculating total cost.



Figure 48: Variable Production/O&M Costs Page


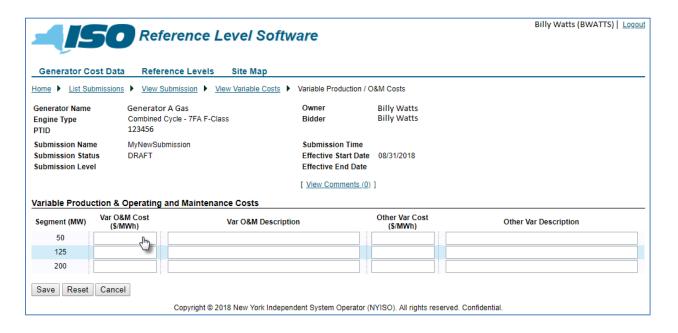



Figure 49: Regulatory & Related Costs Page

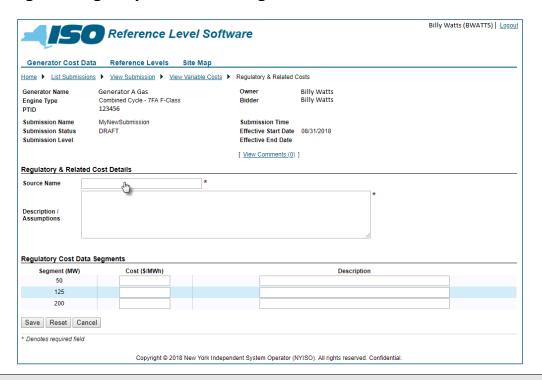

Note: Once the data has been saved via activation of the corresponding button, the user always has the option to Edit Variable Production/ O&M Costs, Remove Variable Production/O&M Costs, or Add Regulatory & Related Costs, Remove Regulatory & Related Costs, or Edit regulatory and related cost data by invoking the applicable link (Figure 50) then completing the additional necessary actions.



Figure 50: Links to Modifying Variable Production & Operating and Maintenance Costs and **Regulatory & Related Costs**

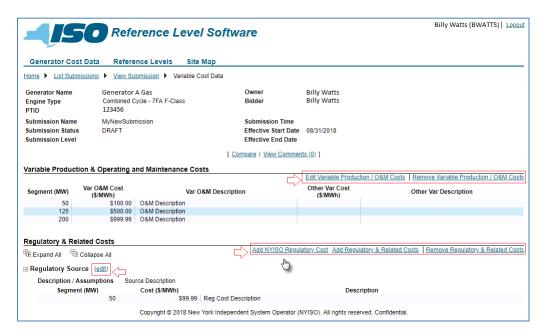

3.3.1.8. Risk and Opportunity Cost Data

This is an optional family. If the generator chooses to identify any opportunity costs, the corresponding page is used to enter other costs not pertaining to variable operating costs. This includes risk opportunity and emergency output costs.

3.3.1.8.1. **Page Definitions**

Figure 51: Emergency Output Details Page Definition

				Eng	ine Ty	pe Gro	oup
Page Field	Data Type	Editable	Description	Α	В	С	D
Emergency Cost DAM (\$/MWh)	Numeric	Y	Entered as value 0 – 999.99.	0	0	0	0
Emergency Cost RT (\$/MWh)	Numeric	Y	Entered as value 0 – 999.99.	0	0	0	0
Emergency Output MW	Numeric	N	Drop-down from segments.	CR	CR	CR	CR
DAM or RT Method of Calculation	Text	Y	Allows user to type in text describing their methodology. Entered as 100-character free-form text.	CR	CR	CR	CR



				Eng	ine Ty	pe Gro	oup
Page Field	Data Type	Editable	Description	Α	В	С	D
				R = Re	quired		
				O = Op	otional		
				CR = C	Condition	ally Req	uired
				NA = n	ot applic	able	

Note: Cost and Method of Calculation fields are required for at least one market.

Figure 52: Opportunity Cost Details Page Definition

				Engi	ne Type	Grou	р
Page Field	Data Type	Editable	Description	Α	В	С	D
Cost (\$/MWh)	Numeric	Υ	Entered as value -999.99 – 999.99	0	0	0	0
Segment (MW)	Text	N	Pre-populated from cost data segments.				
Source Name	Text	Υ	Entered as 30-character free-form text.	CR	CR	CR	CR
Relevant Market(s)	Radio Button	N	Checkbox selection for DAM and/or RT	CR	CR	CR	CR
Descriptions/ Assumptions	Text	Y	Entered as 4000-character free-form text. List all assumptions and/or methods of calculation.	CR	CR	CR	CR
Description	Text	Y	Entered as 100-character free-form text. Enter any additional description pertaining to the MW segment.	0	0	0	0

R = Required

O = Optional

CR = Conditionally Required

NA = not applicable

Figure 53: Risk Premium Details Page Definition

				Engi	пе Туре	Grou	0
Page Field	Data Type	Editable	Description	Α	В	С	D
Cost (\$/MWh)	Numeric	Y	Dollar figure representing the risk factor. Entered as a numeric value in the format in the range -999.999 to 999.999.	0	0	0	0
Risk Factor	Text	Υ	Allows user to enter risk factor in text form. Entered as a 50-character free-form text.	CR	CR	CR	CR
Relevant Market (s).	Radio Button	N	Checkbox selection for DAM and/or RT	CR	CR	CR	CR
Description/As sumptions	Text	Y	Allows user to enter their description/assumption that specifies their method of calculating the risk factor. Entered as 4000-character free-form text.	CR	CR	CR	CR



				Engi	пе Туре	Group	o
Page Field	Data Type	Editable	Description	Α	В	С	D
Segment (MW)	Numeric	N	Pre-populated from cost data segments				
Description	Text	Υ	Entered as 100-character free-form text. Enter any additional description pertaining to the MW segment.	0	0	0	0
						'	ed

3.3.1.8.2. How to Enter Risk and Opportunity Cost Data

The Risk & Opportunity Cost Data page (Figure 54,

Figure 55, and, Figure 56) serves as the portal for entering other costs not pertaining to variable operating costs.

Figure 54: Emergency Output Details Dialog Box as Accessed from Risk & Opportunity Cost Data Page

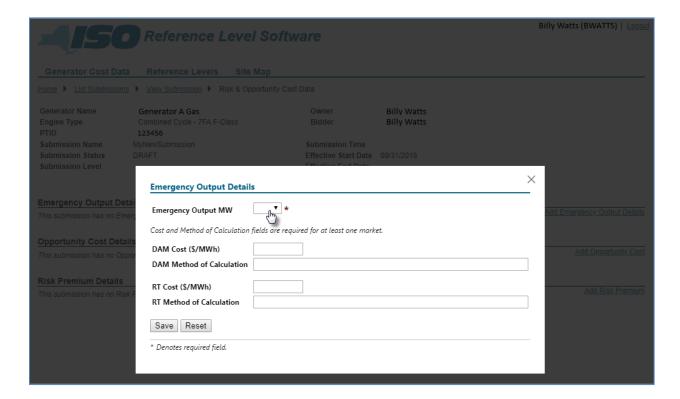




Figure 55: Add Opportunity Cost Page


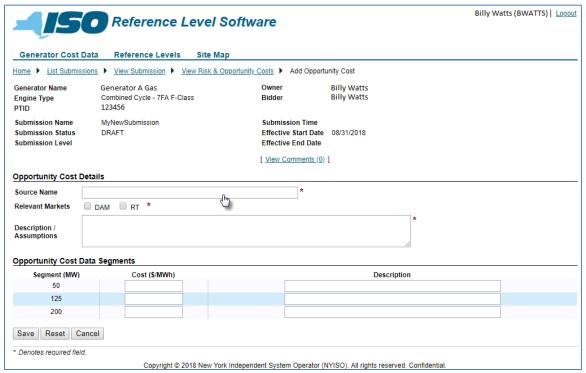



Figure 56: Add Risk Premium Page



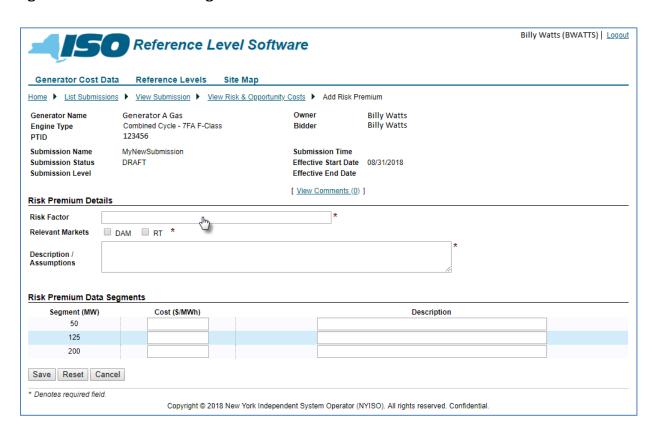

Note: Once the data has been saved via activation of the corresponding button, the user has the option to Edit Emergency Output Data, Remove Emergency Output Data, or Add Opportunity Cost, Remove Opportunity Cost, or Add Risk Premium or Remove Risk Premium by invoking the applicable link (Figure 57) then completing the additional necessary actions.

Figure 57: Links to Modify Emergency Output Details, Opportunity Cost Details, and Risk Premium Details

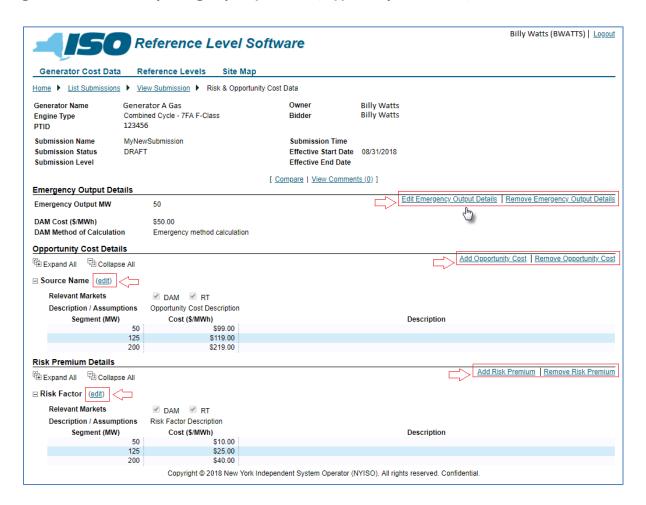

3.3.1.9. Ancillary Services Family

This family is required in order to complete a data submission in RLS. If a generator is capable of providing Regulation services, it is expected that cost data will be provided, however the data fields can be left blank. The corresponding page is used to enter costs pertaining to Regulation Movement variable operating costs. See Figure 59, Figure 60, and Figure 61 below.



Figure 58: Regulation Movement Cost Details Page Definition

				Engi	пе Туре	Grou	р
Page Field	Data Type	Editable	Description	A	В	С	D
Regulation Movement Incremental Energy based Heat Rate Multiplier	Numeric	Y	Entered as value	0	0	0	0
Regulation Movement Default Heat Rate BTU/KWhr	Numeric	Y	Entered as value				
Regulation Movement Default Heat Rate Multiplier	Numeric	Y	Entered as value	0	0	0	0
Regulation Movement Incremental Energy based VOM Multiplier	Numeric	Y	Entered as value	0	0	0	0
Regulation Movement Default VOM \$/MW-Hr	Numeric	Y	Additional VOM due to movement. Entered as value.	0	0	0	0
Regulation Movement Default VOM Multiplier	Numeric	Y	Entered as value	0	0	0	0
Regulation Movement Adder \$/MW-Hr	Numeric	Y	Entered as value	0	0	0	0

R = Required

O = Optional

CR = Conditionally Required

NA = not applicable

How to Enter Regulation Movement Cost 3.3.1.9.1.



Figure 59: Link to Adding Ancillary Services Family


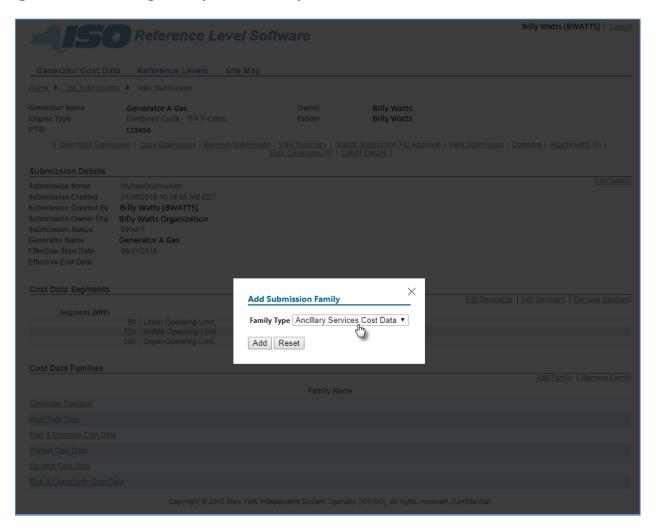


Figure 60: Link to Entering Regulation Movement Cost Components





Figure 61: Regulation Movement Costs

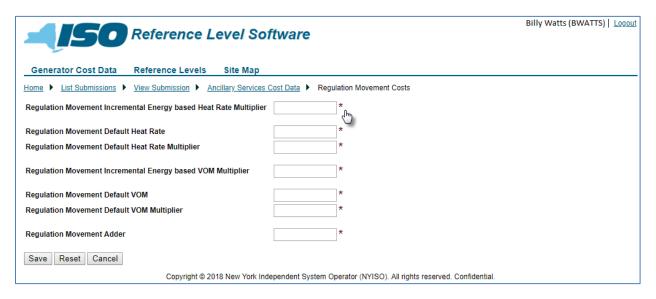

Note: Once the data has been saved via activation of the corresponding button, the user has the option to Edit Regulation Movement Cost Data,

3.3.2. How to Copy a Submission

Users can copy the information from an existing Cost Data Submission via a link on the View Submission page (Figure 62). Invoking this link will open a dialog box where the user can enter a new submission name and new effective start date and effective end date, as well as choose which cost data families to copy (Figure 63). If necessary, the user can cancel out of the copy process by clicking on the **X** in the upper-right corner of the dialog box.



Figure 62: Copy Submission Link


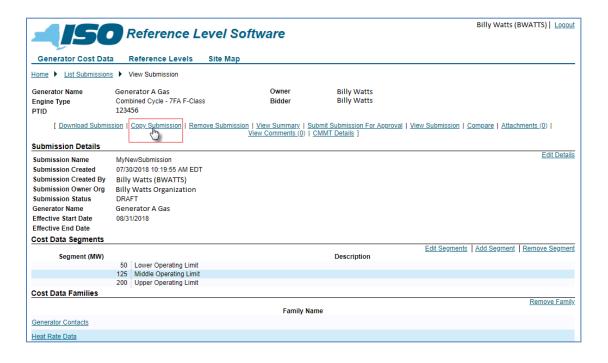




Figure 63: Copy Submission Dialog Box

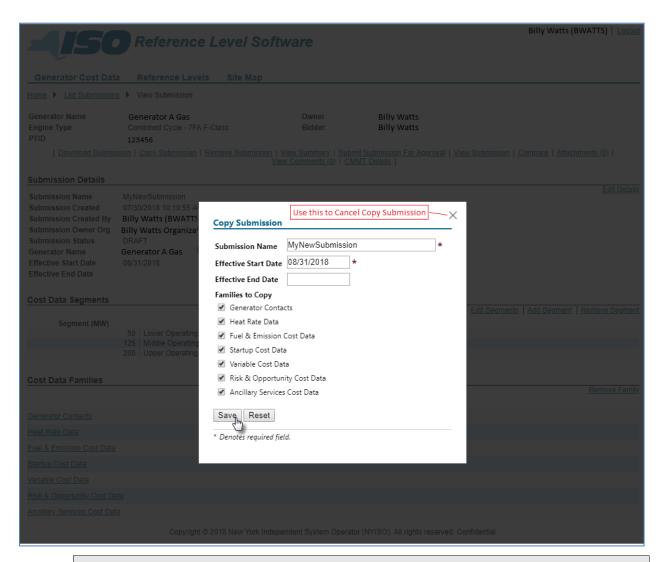

Note: The Submission Name, Effective Start Date, and Effective End Date are populated by default with the name and dates of the submission that is being copied. Even if the user does not enter new data in these fields, the copy will be saved with a new Created Date.

After a copied submission is successfully saved, the application will display the copied submission rather than the original submission.

3.3.3. How to Remove a Submission

Only those Cost Data Submissions having a status of *DRAFT* can be removed.



Figure 64 illustrates the **Remove Submission** link on the *View Submissions* page, Invoking this link results in the display of a confirmation prompt via which the user indicates whether to complete the removal process (Figure 65). If necessary, the user can cancel out of the removal process by clicking on the **X** in the upper-right corner of the confirmation prompt.

Figure 64: Remove Submission Link


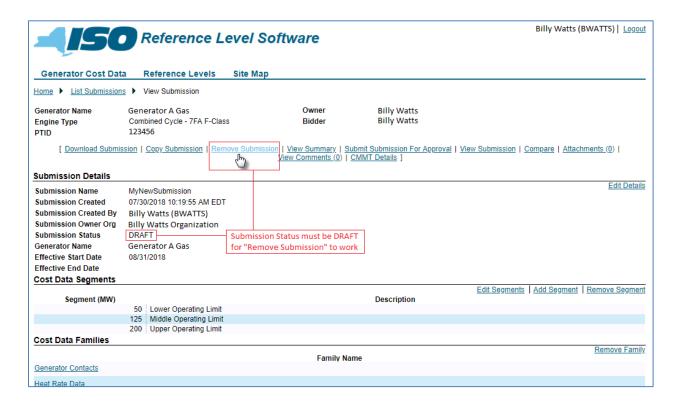




Figure 65: Remove Submission Confirmation Prompt

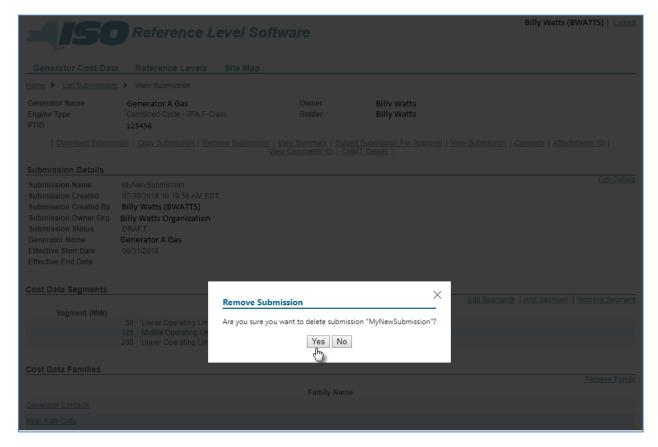

3.3.4. How to Rescind a Submission

Only those Cost Data Submission having a status of *SUBMITTED*, can be rescinded.

Figure 66 illustrates the **Rescind Submission** link on the *View Submissions* page. Invoking this link results in the display of a confirmation prompt via which the user indicates whether to complete the rescinding process (Figure 67). If necessary, the user cancels out of the rescinding process by clicking on the **X** in the upper-right corner of the confirmation prompt.

Note: Once a submission has been rescinded, the submission can no longer be edited or removed. The user can copy the submission, make any changes and then submit the new submission.



Figure 66: Rescind Submission Link


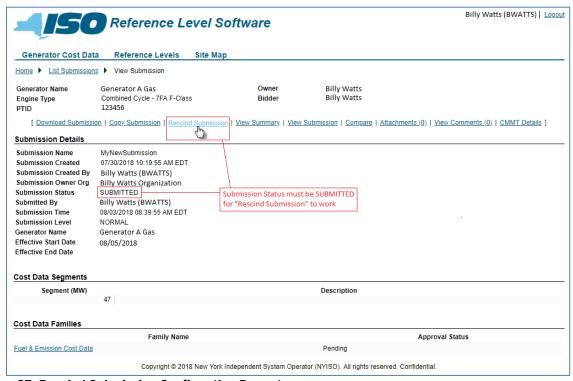


Figure 67: Rescind Submission Confirmation Prompt



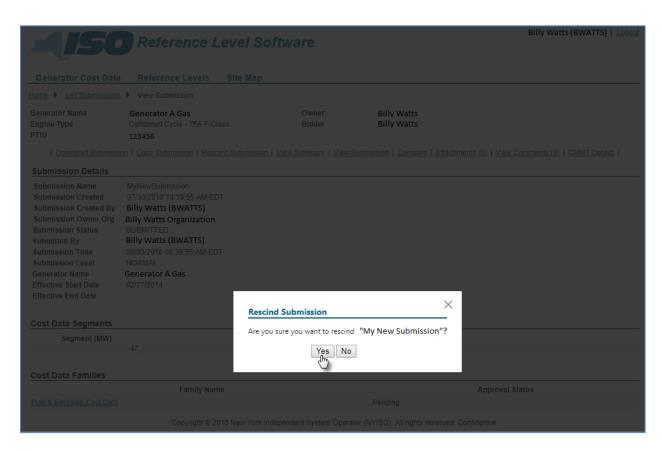

3.3.5. How to View a Submission Summary

Via the **View Summary** link on the *View Submission* page (

Figure 68), users can verify the cost data and total calculations before submitting the cost data to the NYISO for approval, as well as view validation checks before submitting the cost data.

Figure 68: View Summary Link



When the user invokes the View Summary link, the RLS application performs checks and validations against the data on the Cost Data Submission. Figure 75, on the *Submission Validation Errors* section, lists all the edits performed by the RLS application. Those checks and validations having a Y in the Check on View Summary column of the table, are performed when the user invokes the View Summary link. Any violations (i.e., errors) found will be displayed to the user (Figure 69). If no errors exist, the user may view the summary. Otherwise, the errors must be corrected before viewing the summary.


In response to the user invoking the *View Summary* link, the RLS application will calculate sample cost based references for Start-Up, MinGen and Energy references based on the Cost Data Submission data. The application will also plot Energy and MinGen values to show a cost based reference curve. Figure 70 illustrates the results of the Cost-Based reference curve calculation.



Figure 69: Submission Summary with Violations (Errors)



Figure 70: Submission Summary

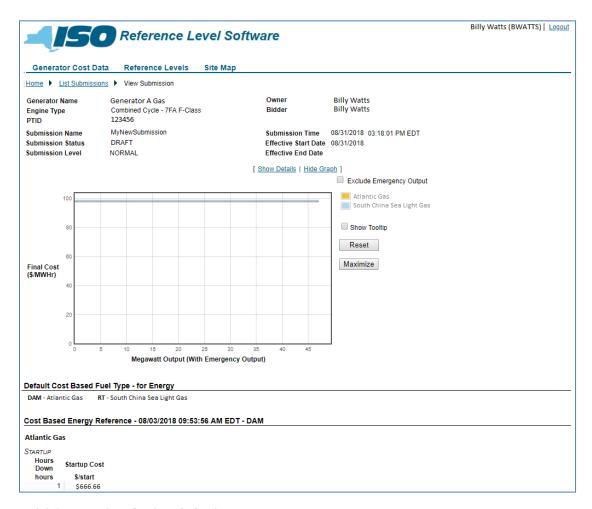


3.3.6. How to Submit a Submission for Approval



After completing the entry for a Cost Data Submission and viewing the corresponding summary, the user would next submit the Cost Data Submission for NYISO approval by invoking the **Submit For Approval** link on the *View Submission* page (

Figure 71).

Figure 71: Submit For Approval Link

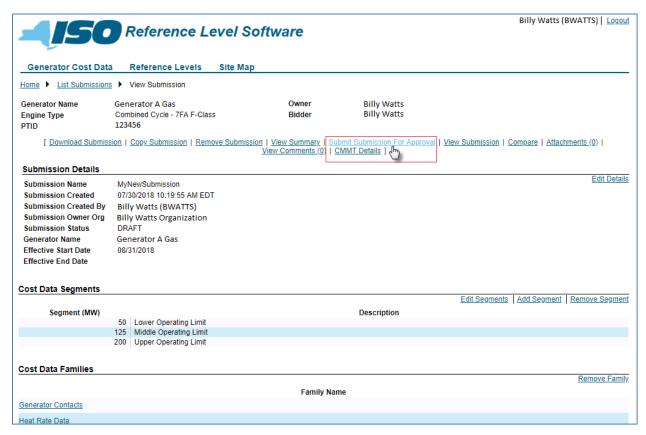


In response, the RLS application displays a confirmation prompt. If necessary, the user can cancel out of the submission process by clicking on the **X** in the upper-right corner of the confirmation prompt. To instead proceed with the submission process, the user must first choose from the drop-down list displayed in the prompt either Normal or Urgent to indicate the appropriate level of submission (Figure 72).

> *Note:* The Urgent level should be used for significant increases/decreases in costs requiring immediate attention.



Figure 72: Cost Data Submission Confirmation Prompt Reflecting Submission Level Drop-down List

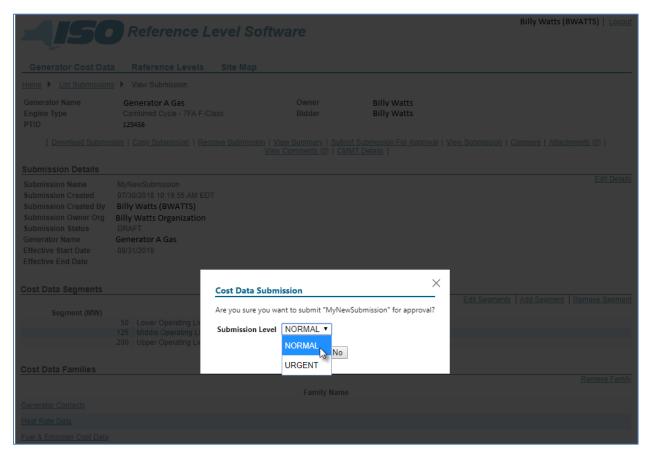

After choosing the submission level, the user must then choose Yes to proceed with the submission process. In response, the RLS application will perform validations against the data on the Cost Data Submission. Figure 75, on the <u>Submission Validation Errors</u> section, lists all the checks and validations performed by the RLS application. Those checks and validations having a Y in the Check on Submit column are performed when the user invokes the Submit For Approval link. Any violations (i.e., errors) found will be displayed to the user (Figure 73). The MP cannot submit a Cost Data Submission until it is error free. Once the Cost Data Submission is free of errors, the RLS application will display a message indicating the submission has occurred (Figure 74).

Note: Once a submission has been submitted, it can no longer be edited or removed. However, the user can copy the submission, make desired changes, and then submit a new submission.



Figure 73: Submission for Approval with Violations (Errors)


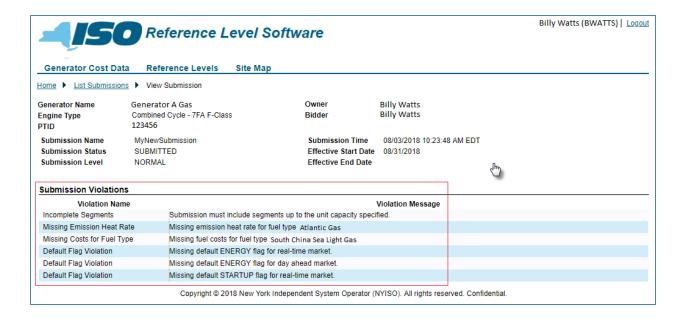


Figure 74: Successful RLS Submission for Approval



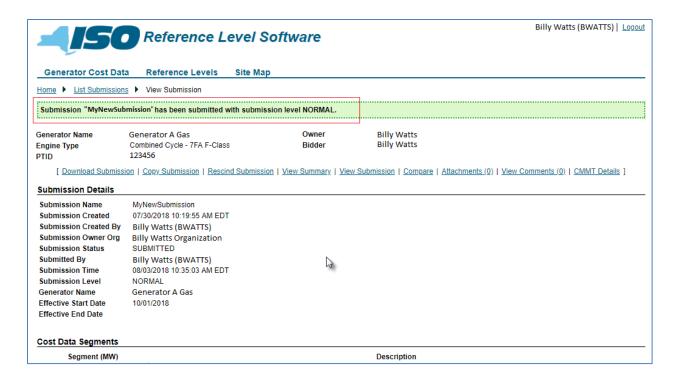

3.3.6.1. Submission Validation Errors

Figure 75: Submission Violations

Violation Name	Check on Submit	Check on View Summary	Violation Message	Clarification
Empty Submission	Y	Y	Submission must include at least one cost data family.	
Invalid Submission Effective Dates	Y	N	Submission effective end dates may not be in the past.	If effective end dates are in the past, the submission would never be used for cost based reference data in the RCE.
Conflicting Fuel Type	Y	Y	Submissions can't have conflicting fuel configurations for the effective date period.	Fuel types for generators have effective dates. A submission specifying fuel configurations must specify them for the entire submission period. If the submission period were to stretch beyond the effective period for a fuel type, the configuration would be invalid for that fuel type.
Conflicting Engine Type Group	Y	Y	Submission can't have conflicting engine type group for the effective date period.	Like fuel types, engine type group for generators have effective dates.
Overlapping Submission	Y	N	Pending submission '[overlapping submission]' name overlaps the effective date range of this submission and contains [overlapping families]. Rescind submission '[overlapping submission name]', wait for '[overlapping submission name]' to be approved, or remove the conflicting families.	Users cannot submit multiple submissions with the same families at the same time. I.e., there can only be one family of each type in the approval process. This violation is triggered if there exists a submission with state SUBMITTED that has at least one family the current submission has.
No Segments	Y	Y	A submission with segmented families must include at least one segment.	
Invalid Incremental Heat Rate	Y	Y	Incremental heat rate not allowed for this engine type group.	Incremental heat rate is not applicable for some engine types (e.g., wind, hydro)
Missing Approved Cost Data	Y	Y	There is no approved cost data for the period ranging from [submission start date] to [submission end date]. Please include all families in this submission.	Approved cost data must always have all six families, so if there is a period of time the submission overlaps that has no cost data; it must have all families to fill the period.
Inconsistent Segments	Y	Y	Submission segments are not consistent with the approved cost data for the period ranging from [submission start date] to [submission end date]. Please include all segmented families in this submission.	Segmented cost data families must all specify cost data for the same segments. So if segments change for one segmented family, they change for all segmented families.



Violation Name	Check on Submit	Check on View Summary	Violation Message	Clarification
Incomplete Segments	Y	Y	Submission must include segments up to the unit capacity specified.	There must be a segment with a megawatt value of the unit capacity specified in the heat rate cost family.
Unit Capacity Too Small	Y	N	Unit capacity specified must be equal to or greater than the MIS value.	Unit capacity is specified in RLS and in MIS. If the user specifies an RLS value smaller than the value in MIS, to the user must either change the value in RLS or update their unit capacity in MIS.
Missing Emission Heat Rate	Y	Y	Missing emission heat rate for fuel type [fuel type].	If a Fuel & Emission Cost Data Family has emission costs entered for a fuel type, the generator must have an emission heat rate entered.
Missing Costs for Fuel Type	Y	Y	Missing fuel costs for fuel type [fuel type].	A Fuel & Emission Cost Data Family must have a generator fuel cost for every fuel type available to the generator.
Invalid Fuel for Generator Fuel Cost	Y	Y	The fuel type [fuel type] is not available for generator [generator] in the period ranging from [invalid start date] to [invalid end date].	Fuel types have effective start and end dates. They must be effective across the entire submission. (If the submission start date is in the past, the fuel type must be effective from the current date to the submission end date.) This violation is triggered if the fuel emission family of the submission has a gen fuel cost defined for an invalid fuel type.
Invalid Startup Fuel Type	Y	Υ	The fuel type [fuel type] is not available for generator [generator] in the period ranging from [invalid start date] to [invalid end date].	Fuel types have effective start and end dates. They must be effective across the entire submission. (If the submission start date is in the past, the fuel type must be effective from the current date to the submission end date.) This violation is triggered if the startup family of the submission has startup intervals defined for an invalid fuel type.
Invalid MinGen Segment	Υ	Y	MinGen not allowed for a unit with this engine type group.	Some engine types (e.g., gas turbines) do not ordinarily incorporate a minimum generation component in their offers.



Violation Name	Check on Submit	Check on View Summary	Violation Message	Clarification
Default Flag Violation	Υ	Y	(If there are no defaults) Missing default [energy or startup] flag for [DAM orRT] market. (If there is more than one default) More than one default [energy or startup] flags for [DAMorRT] market.	One default fuel is required for each market in the fuel emissions family. One default startup fuel is required for each market in the startup family.
Missing Engine Type	N	N	Engine class <class> is not permitted for generators with PTID <ptid> because it has no engine type.</ptid></class>	The user tried to upload cost data for a generator that has no engine type assigned to it for the date specified. THIS IS AN XML VALIDATION ONLY. CHECKED WHEN UPLOADING XML data. Note: Please contact your Customer Service Representative.
Missing Ancillary Cost Data	Y	N	Missing Ancillary Services Cost Data.	The user tried to summit cost data without adding The Ancillary Services Family

3.3.7. How to Compare a Submission

Users can compare a Cost Data Submission to either the current *Approved* cost data for the generator or to another Cost Data Submission by invoking the **Compare Cost Data** link on the *View* Submission page (Figure 76).



Figure 76: Compare Link

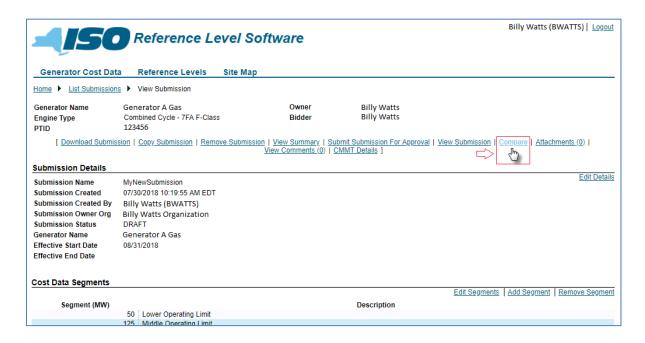


Figure 77 and Figure 78, illustrate the Compare Cost Data page, where the user can choose the Approved cost data or another Cost Data Submission for comparison.



Figure 77: Approved Cost Data on Compare Cost Data Page


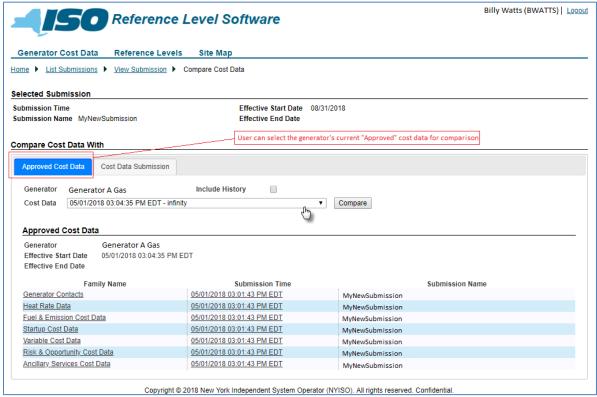


Figure 78 Other Cost Data Submissions on Compare Cost Data Page

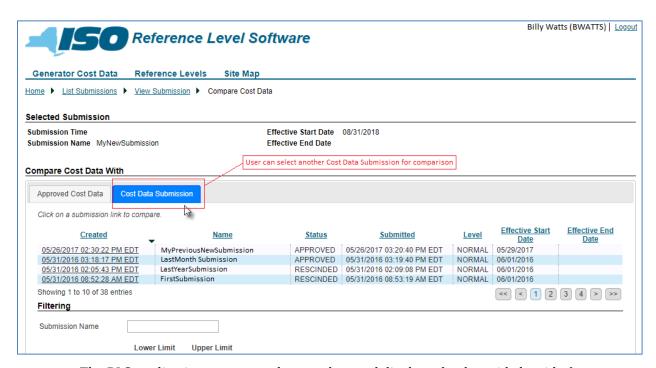


The RLS application compares the cost data and displays the data side by side (



Figure 79). By default only the cost data families with differences are displayed and the differences highlighted. By invoking **Show All** link (

Figure 79); however, the user can instruct the application to display all the cost data families, regardless of any differences.

Figure 79: Side-by-Side Cost Data Comparison

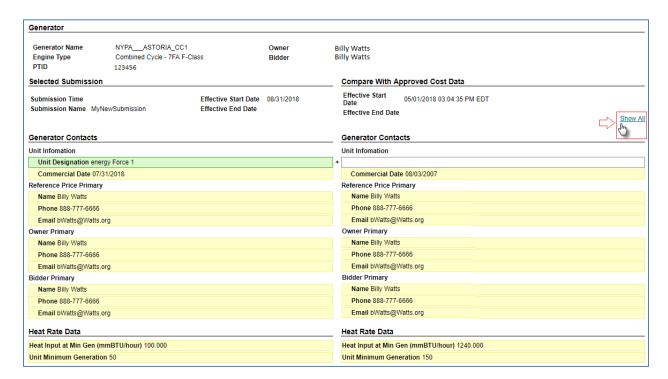

3.3.8. How to Add an Attachments to a Submission


Users can upload and attach any pertinent documentation that supports the Cost Data Submission. The RLS application supports all document types (i.e., .doc, .xls, .ppt, .pdf, .zip, .wpd, .xlsx), with attachment file size and quantity limitations being as follows:

- 2 mb per attachment
- 20 mb total per Cost Data Submission
- 10 total attachments per Cost Data Submission

Attachments upload is initiated by invoking the Attachments link (Figure 80) on the View Submission page, which results in the display of the View Cost Data Attachment page.



Figure 80: Attachments Link

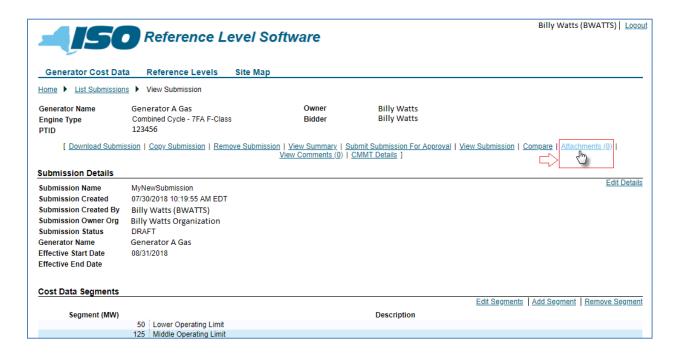

To proceed with the attachment upload, the user would next invoke the **Upload File** link (Figure 81), which results in the display of the *Upload Cost Data Attachment* page.

Figure 81: Attachment Upload File Link




On the *Upload Cost Data Attachment* page (Figure 82), the user would next choose the file to be uploaded, invoking the **Browse** button then in the File Open dialog box taking the necessary steps



to locate and choose the file in question. Finally, the user would invoke the **Submit** button to upload the file.

Note: The user can also cancel the upload attachment process by invoking the **Cancel** button prior to submitting the request.

Figure 82: Mechanisms for Selecting an Attachment File for Upload and Submitting or Canceling Upload

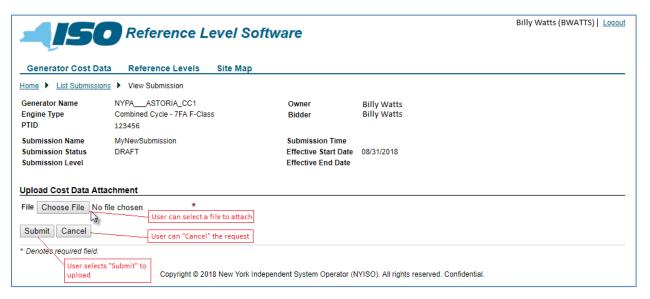

After a file has been uploaded, the RLS application displays the details from the file that was uploaded, and the user can upload additional files or delete any existing attachments (Figure 83).

Figure 83: View Cost Data Attachments Page Reflecting Uploaded Attachments and Related Options






3.3.9. How to Add or View Comments for a Submission

The RLS application provides a means for communication between the MP and NYISO via comments, which can be added and viewed by both parties on two levels: Cost Data Submission family and overall Cost Data Submission.

The MP initiates comment submission by invoking the **View Comments** link on the *View* Submission page (

Figure 84).

Figure 84: View Comments Link

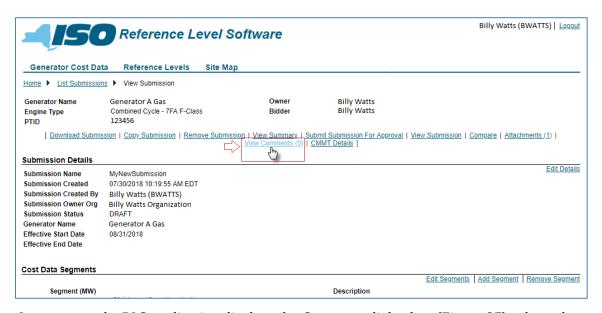


In response, the RLS application displays the *Comments* dialog box (Figure 85), where the user can view the comments for the Cost Data Submission, add/submit a comment, and print the comments. By default, the RLS application displays only those comments entered at the overall Cost Data Submission level. The user can, however, have the RLS application also display comments for the Cost Data Submission families, by enabling the **Show All Comments** option.

> **Note:** When finished working with comments, the user can exit the Comments dialog box by clicking on the **X** in the upper-right corner.



Figure 85: Comments Dialog Box

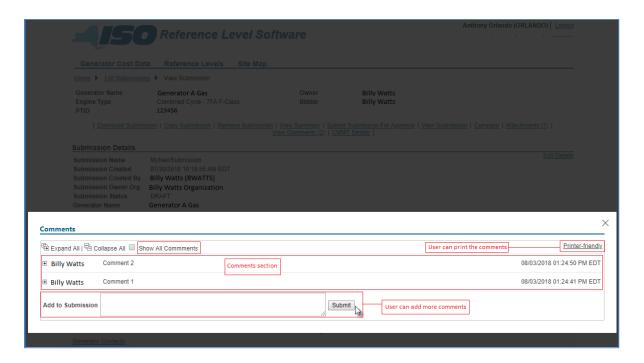



4. Upload/Download Cost Data In XML Format

This section describes the RLS application's XML Upload/Download process, outlining the sequence of activities.

4.1. Upload Cost Data

4.1.1. Acceptable File Formats

Cost Data Submission files must be well-formed XML containing a top level *submission* element from the CDS schema. Templates can be found following the link provided in the Upload Cost Data page in RLS, see

Figure 87 below. The document must be valid according to the schema definitions.

For an overview of XML, please refer to Appendix A.

Note: The user will select the schema based on the engine type group for the generator.

4.1.2. XML Validation

Each Cost Data Submission upload will be validated using the rules in the cds schemas. Any documents containing invalid XML will be rejected and the XML validation errors will be displayed to the user.

4.1.3. Generating Cost Data Submission XML

Cost data submission XML documents may be created using a simple text editor or by using an XML tool such as XMLSpy. When using an XML tool, be sure to provide the tool with the provided CDS schemas so that valid submission XML is generated.

4.1.4. How to Upload a Cost Data Submission

The RLS Application provides the functionality to upload a Cost Data Submission, which is initiated by invoking the **Generator Cost Data** menu then choosing **Cost Data Submissions** followed by **Upload Cost Data** (Figure 86).

In response, the RLS Application displays the *Upload Cost Data* page, where a note near the top of the page and highlightsed in blue provides a link to the CDS schema definition files (Figure 87).



Figure 86: Access Path for Uploading an XML Cost Data File


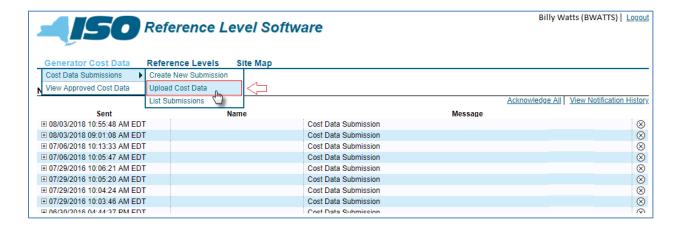


Figure 87: Link to CDS Schema Definitions

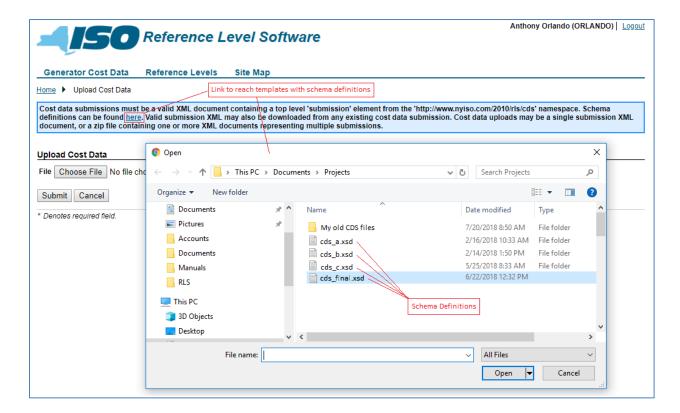


On the Upload Cost Data page (Figure 88), the user would next choose the file to be uploaded, invoking the Browse button then in the File Open dialog box taking the necessary steps to locate and choose the file in question. Finally, the user would invoke the **Submit** button to upload the file.

> Note: The user can also cancel the upload process by invoking the Cancel button prior to submitting the request.



Figure 88: Mechanisms for Selecting an XML File for Upload and Submitting or Canceling Upload

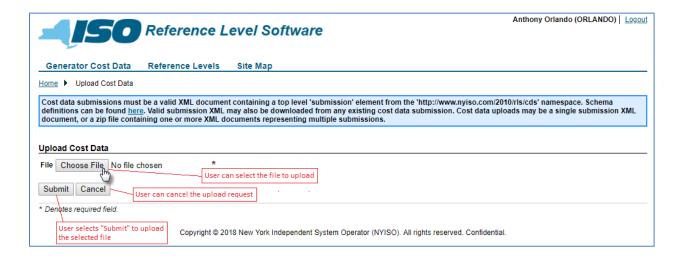

After an XML file has been uploaded, the RLS application displays the cost data information on the View Submission page (Figure 89).

Figure 89: XML Upload Cost Data Submission





4.2. Download Cost Data

Whenever viewing an existing Cost Data Submission in the RLS application, the user has the option of downloading the data in well-formed and valid XML, which may be used for archive and record-keeping purposes and may also be modified and re-uploaded to create new submissions for the same, or another, Cost Data Submissions.

4.2.1. How to Download a Submission

Cost Data Submission download in XML format is initiated from the *View Submission* page by invoking the **Download Submission** link (Figure 90)..

Figure 90: Download Submission Link



In response, the RLS application downloads an XML file and displays a link to open it (Figure 91).

Figure 92 illustrates an excerpt from a sample XML file generated via this process. (For an overview of XML, please refer to Appendix A)



Figure 91: Cost Data Submission XML File Download Dialog Box

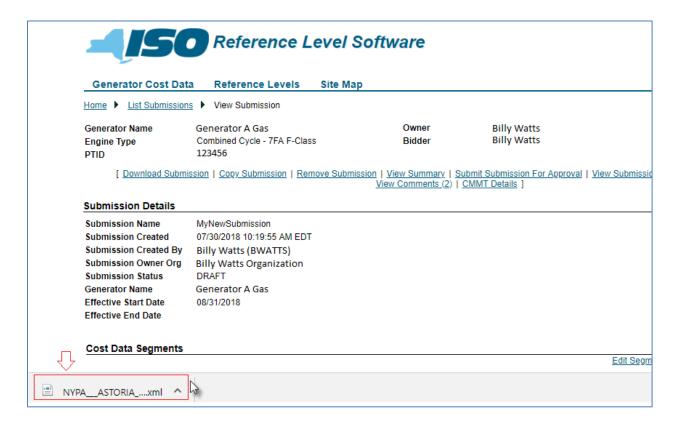


Figure 92: Excerpt from Sample Downloaded Cost Data Submission XML File

```
<?xml version="1.0" encoding="UTF-8" standalone="yes" ?>
cyslminesion xmlns=1.0 encoung= orres standarde= yes.../
cyslbmission xmlns="http://www.nyiso.com/2010/rls/cds-A" xmlns:cds-A="http://www.nyiso.com/2010/rls/cds-A" xmlns:cds-B="http://www.nyiso.com/2010/rls/cds-B" xmlns:cds-C="http://www.nyiso.com/2010/rls/cds-C" xmlns:cds-C="http://ww
   D="http://www.nyiso.com/2010/rls/cds-D
- <details>
          <name>Generator ABC Submission</name>
          <ptid>12345</ptid>
<effectiveStartDate>2010-07-14</effectiveStartDate>
           <effectiveEndDate>2010-07-15</effectiveEndDate>
                                                                                                                                                                                                     De
           <engineClass>Group A </engineClass>
     </details>
- <segments>
          <segment mw ="1.0" />
           <segment mw="20.0" />
      </segments>
- <costDataFamilies>
     - <generatorContactFamily>
                <commercialDate>2010-09-01</commercialDate>
           - <contacts>
                - <refPrimaryContact>
                          <name>Ref Name</name>
                           <phone>111-111-1111</phone>
                           <email>username@domain.com</email>
                      </refPrimaryContact>
                     <refSecondaryContact>
                           <name>Ref2 Name</name>
                           <phone>111-111-1111</phone>
                            <email>username@domain.com</email>
                    </refSecondaryContact>
<ownerPrimaryContact>
                           <name>Owner Name</name>
                           <phone>222-222-2222</phone>
                           <email>username@domain.com</email>
```



5. List Submissions


This section describes the RLS application's List Submission feature, outlining the sequence of activities.

How to List Submissions

The RLS application allows the user to view a list of all their associated Cost Data Submissions filtered based on user preference.

This task in initiated by choosing the **List Submissions** option from the **Reference Levels** menu (Figure 93).

Figure 93: Access Path for Viewing Cost Data Submissions

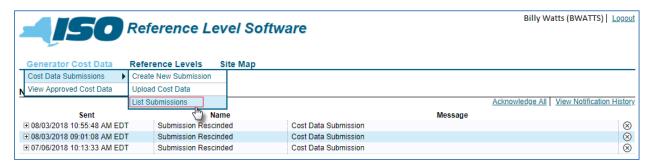


In response, the RLS application displays the *List Submissions* page (Figure 94), where the upper section reflects a list of all Cost Data Submissions sorted by creation date in descending order, and the lower section reflects filters allowing the user to narrow the display of Cost Data Submissions by any or all of the following parameters:

- Submission Name
- Created Date (lower and upper limits)
- Submission Date (lower and upper limits)
- Effective Start Date (lower and upper limits)
- Effective End Date (lower and upper limits)
- Submission Status
- Generator Name
- Submission Level



Figure 94: List Cost Data Submissions

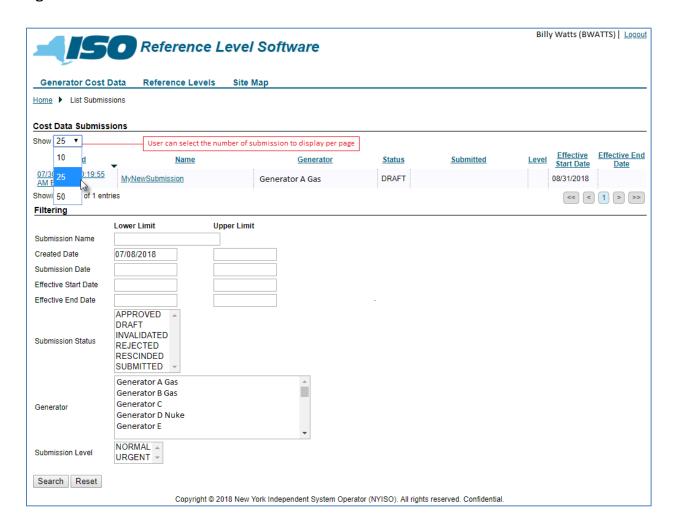



6. View Approved Cost Data

This section describes the RLS application's View Approved Cost Data feature, outlining the sequence of activities.


6.1. How to View Approved Cost Data

The RLS Application allows users to view approved cost data

This task in initiated by choosing the **View Approve Cost Data** option from the Generator Cost Data menu (

Figure 95).

Figure 95: Access Path for Initiating Display of Approved Cost Data

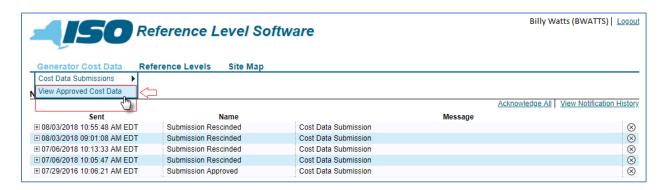


In response, the RLS application displays the Approved Cost Data page (Figure 96), where the user would next choose a generator from the drop-down list of user-approved generators then indicate via the **Include History** option whether the application should provide access to expired approved data for viewing. The RLS application responds by populating the Cost Data drop-down list with approved cost data by effective start and end date range. The user may then choose which approved cost data to view.

Once the RLS application displays the chosen approved cost data, the user may view details on a specific data family within the approved cost data by invoking the applicable link. In addition, the user may **Compare** the cost data to another Cost Data Submission, **Copy To Submission** the approved cost data, or **View Summary** of the approved cost data by invoking the applicable link then taking any additional necessary actions.



Figure 96: Options for Viewing Approved Cost Data

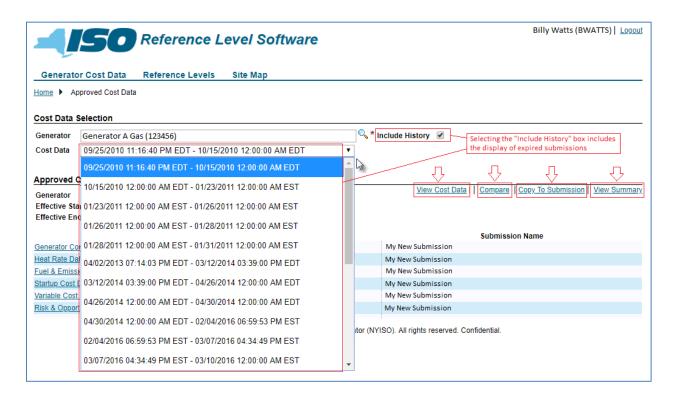



7. View Reference Levels

This section describes the RLS Application's View Reference Levels feature, outlining the sequence of activities.

7.1. How to View Reference Levels

To view Reference Levels

The Reference Level Software (RLS) Application provides the user the ability to view Reference Levels. The user will have the ability to view energy, startup and time based (Emergency Response Rate, Maximum Stops, Minimum Down Time, Minimum Run Time, MinGen MW, Normal Response Rate, Regulation Response Rate, Start-Up Notification Time) Reference Levels. This task in initiated by invoking the Reference Levels menu then choosing View Reference Level Price followed by **List Reference Values** from (Figure 97).

Figure 97: Access Path for Initiating Display of Reference Level Values



In response, the RLS application displays the List Reference Values page where the user would next choose a generator from the drop-down list of user-approved generators, and selecting the **Market Date** by populating the corresponding field (Figure 98). The RLS application will then display all the reference levels that were calculated for that day in the Market Hour drop-down list (Figure 99).

Next, the user selects a market hour from the drop-down list, and presses the 'Search' button.

Once the RLS application displays the Reference Levels matching the designated criteria, the user may view values not currently displayed by invoking the applicable **Show Details** link (Figure 100).



Figure 98: List Reference Levels for Market Date



Figure 99: List Final Reference Values Page Illustrating Filter Options and Links to Details

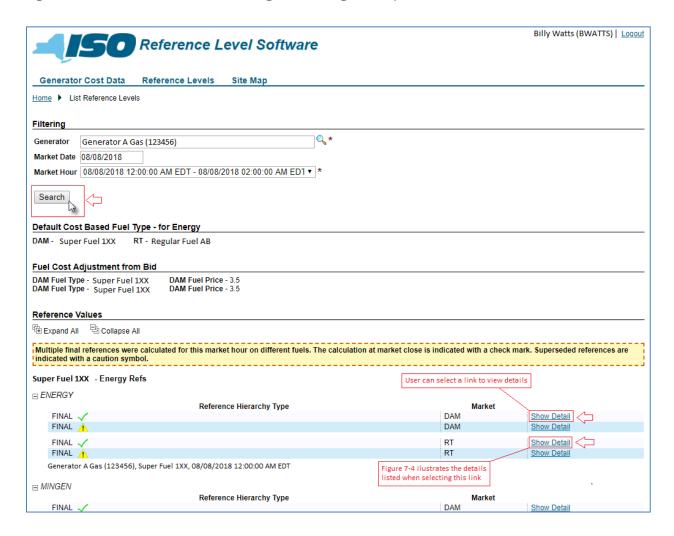




Figure 100: Example of Final Reference Values Detail





8. Notifications

This section describes the RLS application's Notification feature, outlining the sequence of activities.

8.1. How to View Notifications

The Reference Level Software (RLS) Application generates notification messages based on the Cost Data Submission request type. Subsequent notifications are created for the various levels of the Cost Data Submission request. The notifications are displayed on the home page of the RLS application in addition to being sent in an e-mail.

> Note: A user's MIS profile must have a valid e-mail address on file. The RLS notification process uses this e-mail address to send notifications.

Figure 101 lists notification messages that are sent to MPs, along with the events that trigger the notification messages.

Figure 101: Notification Triggers, Recipients, and Messages

Notification Title	Notification Trigger	MP Recipient(s)	Message
Submission Approval	All family approvals are approved.	The MP user who submitted the cost data The Reference Price Primary Contact	Cost Data Submission '[submission]' has been approved.
Submission Rejected	All family approvals are processed and at least one approval was rejected.	The MP user who submitted the cost data The Reference Price Primary Contact	Cost Data Submission '[submission]' has been rejected.
Submission Invalidated	Generator engine type group or fuel type is changed within a submission's effective period.	The MP user who submitted the cost data.	Cost Data Submission '[submission]' has been invalidated as 'Generator Engine Type/Generator Fuel Type' during the period '[date]' and '[date]' has changed.
More Information Requested	NYISO requests more information on an approval family.	The MP user who submitted the cost data	Cost Data Submission '[submission]' requires more information: [question].
More Information Provided	MP sends response to NYISO Request For More Information.	The MP user who submitted the cost data	Cost Data Submission '[submission]' has new information: [answer].
Urgent Submission Upgrade	Submission level is upgraded by NYISO.	The MP user who submitted the cost data	The priority of Cost Data Submission '[submission]' has been increased to urgent. This submission will be treated as an emergency request and receive priority for approval.



Notification Title	Notification Trigger	MP Recipient(s)	Message
Urgent Submission Downgrade	Submission level is downgraded by NYISO.	The MP user who submitted the cost data	The priority of Cost Data Submission '[submission]' has been decreased to Normal. This submission will no longer be treated as an emergency request.
Submission Rescinded	Submission is rescinded by MP.	The MP user who submitted the cost data	Cost Data Submission '[submission]' has been rescinded.
Submission Effective Range Expired	All family approvals are approved and submission end date is in the past.	 The MP user who submitted the cost data The Reference Price Primary Contact 	Cost Data Submission '[submission]' has been approved after its effective range has expired. The data in this submission will not be used for Reference Level calculations.

Figure 102 illustrates the display of Notifications on the RLS application's Home page.

Notifications are displayed on the Home page until the user invokes the **Acknowledge All** link beneath the Notifications header. In response, the RSL application displays a confirmation prompt (Figure 103). Assuming the user precedes with the acknowledgment process, the applications removes notifications from the Home page and moves to history. The user always has the option to view a notification in history.



Figure 102: Home Page Illustrating Notifications and Acknowledgment Link


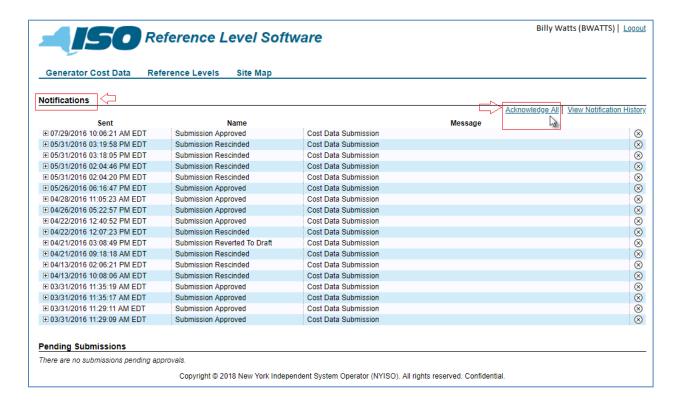


Figure 103: Notification Acknowledgment Confirmation Prompt



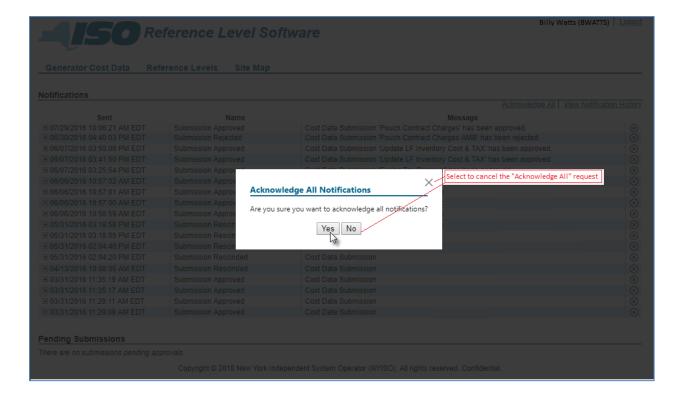


By invoking the **View Notification History** link beneath the *Notifications* header, the user can access the *View Notification History* page. The upper section of this page lists all notifications previously consigned to history sorted by sent date in descending order, and the lower portion provides filters allowing the user to narrow the display of notifications by any or all of the following parameters (

Figure 104):

- Sent Date (lower and upper limits)
- Acknowledged Date (lower and upper limits)
- Notification Type
- Message

Figure 104: Notification History Display Filtering Options

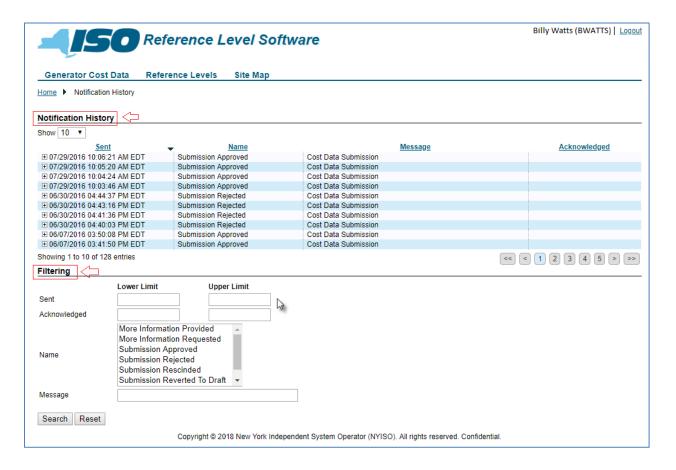



9. Pending Submissions

This section describes the RLS application's Pending Submissions feature.


9.1. How to View Pending Submissions

The RLS application lists all pending Cost Data Submissions on its Home page sorted by created date/time in descending order.

> Note: A pending Cost Data Submission is one that has been submitted by the MP and is awaiting approval.

Figure 105 illustrates the display of pending Notifications.

Figure 105: Home Page Illustrating Pending Submissions

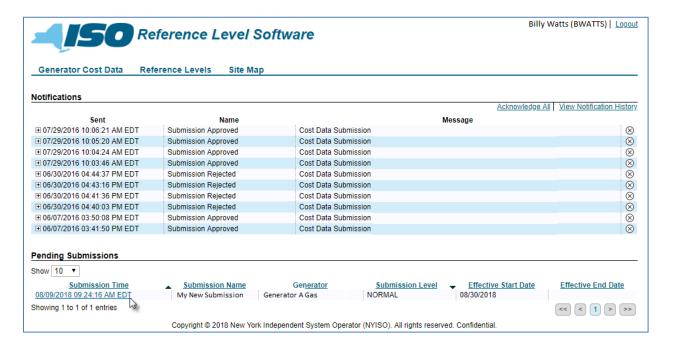



10. Cost Data Approval Process

10.1. **Cost Data Submission Status Codes**

Six different states may be associated with a Cost Data Submission throughout its lifespan, as outlined below:

Draft

Cost data information as entered has been saved and stored in the RLS database(s). The submission has not been sent to the NYISO for approval. The NYISO has the ability to revert submitted cost data back to Draft so that the Market Participant may make updates to the data.

Submitted

The cost data information has been submitted to NYISO for approval. Once submitted, data are then placed in a queue for review and approval by NYISO.

Rescinded

Cost data information that was previously submitted to NYISO for approval is being rescinded, so NYISO approval is no longer being requested. A Cost Data Submission must be in a *Submitted* state to allow the change to *Rescinded* status.

Approved

The NYISO has reviewed the Cost Data Submission and approved it.

Invalidated


The configuration of the generator for a Cost Data Submission has changed for a period of time that overlaps a period of time within the Cost Data Submission. A Cost Data Submission that is in the *Draft* or *Submitted* state can be invalidated.

Rejected

The NYISO has reviewed the Cost Data Submission and determined it cannot be approved. A Cost Data Submission will be updated to a *Rejected* status when any one component is rejected. Therefore, a rejected Cost Data Submission may contain approved components. A user can view the rejected Cost Data Submission and see which components have been rejected (Figure 106).



Figure 106: Rejected Component Among Approved Components for a Rejected Cost **Data Submission**

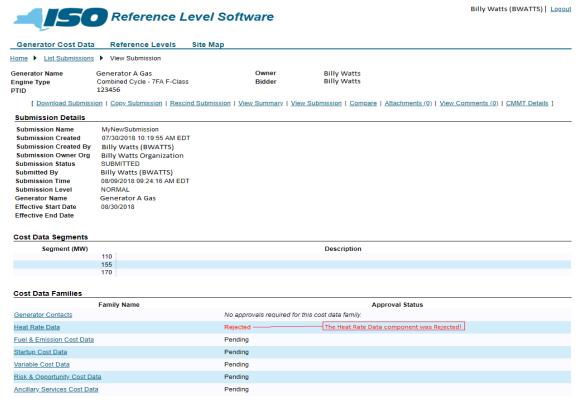

Copyright © 2018 New York Independent System Operator (NYISO). All rights reserved. Confidential

10.2. **Question and Answer Exchange**

During the approval process of a Cost Data Submission, the RLS application provides functionality for a question and answer exchange between the MP and the NYISO to facilitate the approval of the Cost Data Submission.

The RLS application provides the MP access to questions from the NYISO via the List Submissions feature. After viewing a listed submission, the MP would invoke the View Approved Questions link (Figure 106).

> **Note:** The View Approved Questions link is displayed **only** when a Cost Data Submission's status is Submitted.

The MP can then respond to the question (Figure 107).



Figure 107: View Approval Questions Link


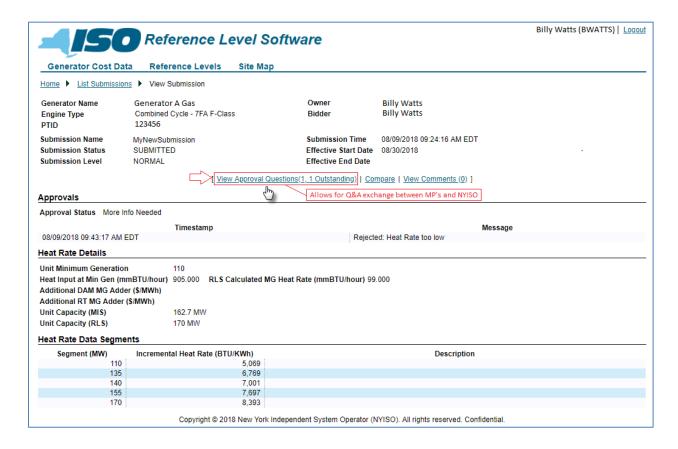


Figure 108: Sample Approval Question and Response



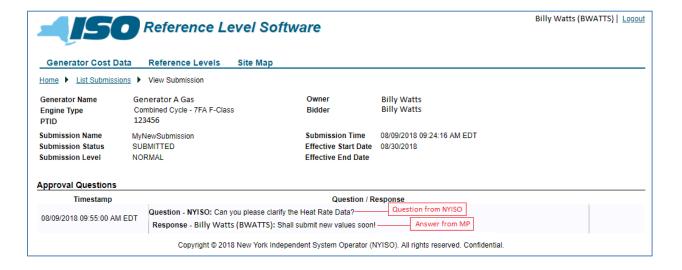

Appendix A XML Overview

Overview A.1.

The RLS application provides users the ability to upload and download Cost Data Submissions as an alternative to viewing and entering cost data using the interactive Web-based interface.

Cost Data Submission uploads and downloads must be valid XML containing a top level submission element.

For more information on how to utilize this functionality, contact NYISO's Market Mitigation and Analysis department.



Appendix B Fuel Cost Adjustment Functionality

Overview **B.1**.

Generators have the ability to submit Fuel Cost Adjustments, in which generators enter a burdened fuel price and/or fuel type on their RT bids and/or DAM bids.

Entering burdened fuel price and/or fuel type on the bid will allow the generator's Energy, MinGen and Startup references to be re-calculated with the new fuel information and more closely match the generator's actual fuel costs. The RLS application will use the burdened fuel price to adjust Reference Levels, subject to RLS rules.

The submission deadline for updated fuel information is 15 minutes prior to the close of the DAM (4:45 a.m.). For the RT market, submissions must be received prior to market close, which is 75 minutes prior to the operating hour.

Burdened fuel prices may be entered on any individual hour, multiple hours, or all hours of a particular day to properly reflect actual fuel costs. Fuel price and type information is validated using the current approved RLS cost data at the time of the DAM and RT close. Fuel cost and fuel type information is compared to posted Fuel Entry Thresholds to perform an ex-ante validation. If the submitted fuel information exceeds the posted Fuel Entry Threshold, a generator may contact MMA to request a Secondary Threshold that will permit the proposed change in fuel price or fuel type to be validated.


To view the Fuel Entry Thresholds visit the following link and see screenshot below:

https://www.nyiso.com/market-monitoring

Note: A fuel type change that does not have an associated Fuel Entry Threshold will result in a fuel threshold validation error and references will not be updated.



Figure B-1: Fuel Entry Thresholds

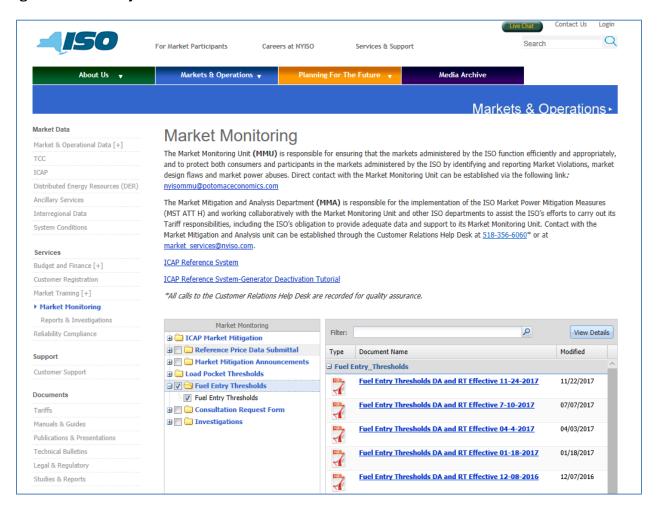

All submitted fuel information is also reviewed *ex-post* to ensure that accurate information was submitted. The submission of fuel information that is found to have been biased in the Market Participants favor can result in the revocation of the ability to use the Fuel Cost Adjustment functionality for the affected generator(s). The submission of inaccurate fuel information that impacts market prices or guarantee payments may result in a penalty, as well as revocation of the ability to use the Fuel Cost Adjustment functionality, for the affected generator(s)

Note: To update any other Reference Level cost component requires submittal through the RLS application and NYISO approval.



Privileges B.2.

By default, burdened fuel price and fuel type modification privileges will be "on" for all generators that burn fuel oil, gas or kerosene. For all other generators, the privilege will be "off". Units that burn landfill gas will also default to "off". An MP may request this privilege by contacting its Customer Relations representative. These privileges can be set separately for RT and DAM.

Fuel Type/Burdened Fuel Price B.3.

B.3.1. **Entering Fuel Type/Burdened Fuel Price**

Using FCAs, an MP can enter fuel type and/or burdened fuel price to update its Energy Reference Level for a specific bid date and hour without NYISO approval, as long as bids are within posted Fuel Entry Thresholds. Burden includes applicable taxes, transport and distribution costs, and fuel acquisition brokerage fees.

- For *NYC gas costs*, burden may include the following:
 - NYC Sales Tax
 - NYC Utility Excise Tax
 - Pipeline Transport Cost (usually zero in NYC)
 - Local Distribution Cost (charges by the gas Local Distribution Company to deliver gas from an Interstate Pipeline metering point to the site of the generator)
 - Fuel Acquisition Brokerage Fees (pre-contracted \$/mmBTU procured)
- For *NYC fuel oil costs*, burden may include the following:
 - NYC Sales Tax
 - Petroleum Business Tax
 - · Spill Tax
 - Transport Costs (as applicable)
 - Fuel Acquisition Brokerage Fees (pre-contracted \$/mmBTU procured)
- For *Rest of State fuel oil costs*, burden may include the following:
 - Petroleum Business Tax
 - Spill Tax
 - Any applicable local/municipal sales taxes
 - Transport Costs (as applicable)
 - Fuel Acquisition Brokerage Fees (pre-contracted \$/mmBTU procured)
- For *Rest of State natural gas costs*, burden may include the following:
 - Any applicable local/municipal sales taxes



- Pipeline Transport Costs, for delivery from the point of the spot quotation to the metering point where the gas LDC picks up the gas
- Local Distribution Costs (charges by the gas LDC to deliver gas from an Interstate Pipeline metering point to the site of the generator)
- Fuel Acquisition Brokerage Fees (pre-contracted \$/mmBTU procured)

In general, the tax rates and adders that determine the burden will rarely change: When these burden parameters do happen to shift, the new values should be submitted through the normal RLS Submission process. Changes in burdened reference fuel costs made through FCAs should typically reflect deviations in the commodity cost of the fuel, rather than changes in the more static burden parameters.

> **Note:** The MP is responsible for the accuracy of fuel type and burdened fuel prices submitted. Inaccurate information can result in a penalty/sanction being assessed by the NYISO in accordance with Section 23.4.3.3 of the Market Mitigation Measures. Submitting inaccurate information to the NYISO may also violate FERC's Regulations prohibiting electric energy market manipulation, and the market monitoring unit may be required to report the Market Participant's behavior to FERC's Office of Enforcement. See 18 C.F.R. § 1c.2(2).

B.3.2. **Validations**

Two sets of validations will be performed:

- At Bid Submittal:
 - Fuel Type data may be submitted with DAM or RT bids and will be validated as follows upon submittal:
 - Fuel Type ID must be a whole number greater than or equal to zero, or null.
 - Fuel Type ID must be one of the valid IDs in the RLS application.

An error message will be returned if the fuel type data does not pass these validation checks.

- Burdened Fuel Price may be submitted (in \$/mmBTU) with DAM or RT bids, and will be validated as follows upon submittal:
 - Burdened Fuel Price must be a numeric value greater than or equal to zero, or null.
 - Maximum value for Burdened Fuel Price is \$999.999/mmBTU.

An error message will be returned if the fuel cost data does not pass these validation checks.

- At Market Close:
 - The MP must have the ability to enter burdened fuel price/fuel type.
 - Fuel Type as entered is one of the pre-approved fuels submitted with the MP's cost data.



• Fuel Type/Burdened Fuel Price fall within the posted Fuel Entry Thresholds (maximum and minimum thresholds). Thresholds may be different between the DAM and RT Markets. NYISO may also grant generator specific secondary thresholds by generator and by market.

If the actual burdened fuel price falls outside the posted thresholds (which incorporate index prices), NYISO approval will be required for a change to take effect. These types of changes should be submitted via the RLS application or via an email request for a Secondary Threshold.

Note: Simultaneous RLS and MIS submissions may be appropriate.

Reference Updates B.3.3.

The RLS application will re-calculate the generator's Energy reference with the new fuel information at market close.

> Note: If failure occurs on any validation, the Energy reference will not be updated. The MIS bid itself will not be invalidated and the offer submitted for the Generator will be tested for possible mitigation against the unmodified Reference Level.